

## **Safety Precautions**

- This product is designed for use in moderate dimares. Do not use or install this unit where it would be exposed to direct sunlight or in extremely hot temperatures, or near a radiator, stove or appliance that produces heat.
- Do not take this unit into the bathroom, or near a swimming pool. Do not use it where it would be exposed to water, moisture, dripping or splashing.
- No objects filled with liquids, such as vases, shall be placed on the product.
- No naked flame sources, such as lighted candles, should be placed on the product.
- If water gets inside the unit. Unplug the power cord from the supply socket and consult your dealer.
- Do not handle the power cord with wet hands. To avoid electric shock, NEVER touch any internal parts. Repairs/Service should be left to qualified service personnel.
- When connecting or disconnecting from the mains supply, hold the plug, not the cord. pulling the cord may damage it and could be dangerous.
- Do not drop the unit, spill liquid into it or allow objects to fall in it .
- If the unit fails to operate, disconnect from the mains and consult qualified service personnel.
- When plugged in, a very small current will flow. To save electricity and for safety when not using the unit for an extended period of time, it is recommended that the product is completely disconnected at the AC mains socket.
- Consult your nearest dealer when damage, disconnection or contact failure is found with the cord.
- Do not bend the cord sharply, pull or twist it.
- Do not modify the power cord in any manner.
- Do not insert any metallic object into the unit.
- Unplug the power cord when there is the possibility of lightning.
- In case of malfunction due to electrostatic discharge just reset the product reconnect of power source may be required)to resume normal operation.


## **Positioning the unit**

- A minimum distance of 6 INCHES must be maintained to provide sufficient ventilation.
- Allow adequate ventilation for the unit ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table cloths, curtains etc.  
Do not stand it on a thick pile carpet, or install it in a place with poor air flow.
- Place the unit on a flat even surface.
- Do not use the unit in excessively hot, cold, dusty, damp or humid place.
- Condensation may form inside the CD player if the unit is left anywhere warm and damp, or if you move the unit from somewhere cold (e.g Your car boot)to a warm room. In this case, let the unit stand for 1-2hours,or gradually increase the room temperature so the unit is dry before you use it .
- Do not place it where it could be subject to vibration.
- Do not place it where it could be magnetised by a magnet or speaker since there are magnets in the speakers, do not place tapes or magnetic cards on them as recorded data could be erased.
- When this unit is used near a TV, the TV picture could be distorted. if this happens, move the unit away from the TV. If this does not correct the situation, avoid using the unit when the TV is turned on.
- Keep the CD door closed so the lens is not contaminated by dust. DO not touch the lens.

**Safety Mechanism:**

This unit incorporates a safety interlock mechanism which switches the laser beam on and off, so that when the disc holder is open, the laser beam stops automatically.

**Location of Controls**

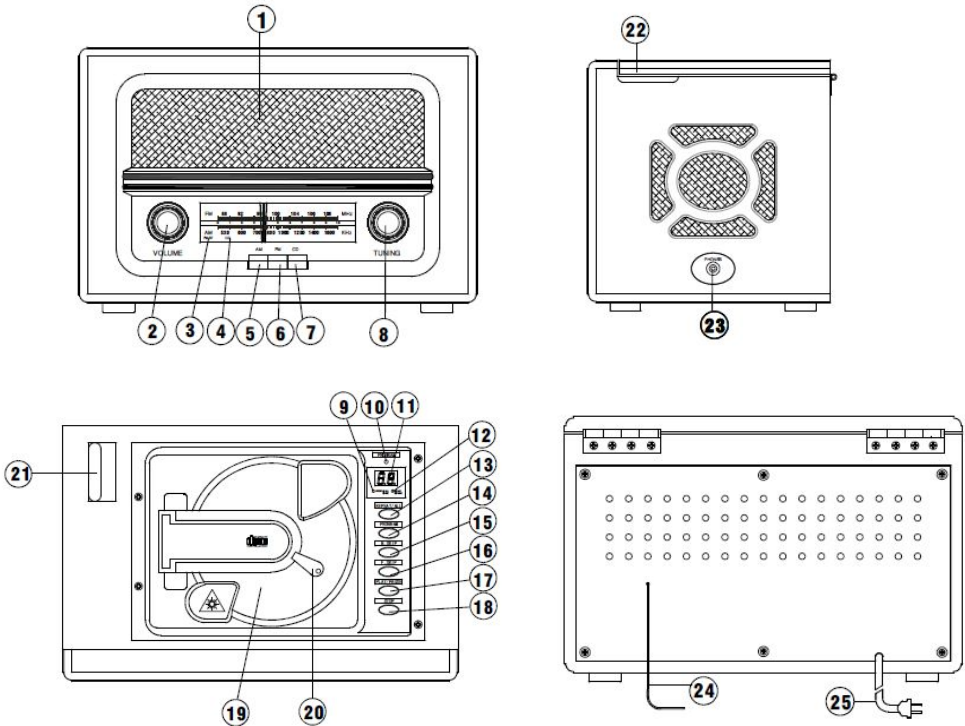

## **Location of Controls**

### **The front view**

1. Speaker Window
2. Volume/On/Off Knob
3. FM ST LED
4. CD LED
5. AM Switch button
6. FM Switch button

### **Top view**

7. CD/RADIO Switch button
8. Tuning Knob
9. CD Repeat ALL Indicator
10. CD Program Indicator
11. CD LED Display
12. CD Play/Pause Indicator
13. CD Repeat /All Button
14. CD Program Button
15. CD Backward Skip Button
16. CD Forward Skip Button
17. CD Play/Pause Button
18. CD Stop Button
19. CD Room
20. CD Orientation arm
21. Control CD cover arm (put it forward, so that can close the CD cover)
22. CD Cover

### **Rear View**

23. 3.5mm Earphone Jack
24. FM.ANT
25. AC Power Cord

## **Spécifications techniques**

### **Power Supply**

AC	230 V - 50 Hz
Audio Output Power	1.5WattsX2RMS
Power Consumption	12W
Unit Dimension	310(L) X 206(W) X 210(H)mm
Net Weight	4 Kgs

### **Radio frequency coverage**

FM	88 -108MHZ
AM/MW	530-1600 KHZ

### **CD Player**

Frequency Response	100HZ-16KHZ
--------------------	-------------

## **Preparation for use**

Carefully unpack the Main unit from its carton(do not attempt to connect Anything at this stage). You should have the following items:

1. Main Unit with built in AC plug.
2. This User Guide.

If any these items is missing, consult your dealer Keep any packaging in case you want to transport the Main unit at some later date.

## **Connections**

- \* Check that the main supply is 230V~50HZ.
- \* Connect the AC Power cord to the AC outlet.
- \* Unwind the FM antenna.

## **AC power operation**

- \* If you wish to power your unit from an electrical outlet, find a location that is close and within easy access of an outlet. Do not stretch the cable-if you cannot reach a supply you should find an alternative location for the system.
- \* Connect the AC power cord into a suitable outlet and switch on at the mains Plug if the socket has a switch.

## **Switching on Main Power**

Your system comes fitted with a cable and plug.

Ensure the voltage is compatible and plug the unit into an outlet to switch on.

## **Adjusting the sound**

To adjust the sound turn the Volume Knob located on the Left side of your system.

## **Using the Radio**

To turn the radio on

Make sure the power is on before turning on the radio.

Turn the Function knob . ⑦. to Radio position.

Use the AM/FM.ST Band Selector to select the band.

Turn the Tuning Knob to select the channel you want.

Antenna

For best FM reception, extend the wire antenna located at the back of the unit.

Move it around until you get the best FM reception.

## **Care & Maintenance**

### **Cleaning CDS**

Use a soft cloth to wipe off any fingerprints and dust from the disc surface.

Wipe in a straight line from the centre to the outside of the disc. Small dust

Particles and light stains will not affect reproduction quality.

- \* Never use chemicals such as record sprays, anti-static sprays, benzine or thinners to clean your CDs.
- \* To reduce the risk of scratches, please put the CD back into the bag after using .
- \* Do not expose CDs to direct sunlight, high humidity or high temperatures for long periods.
- \* Do not stick paper or write anything on either side of the CD.
- \* Only discs displaying this symbol can be played on this unit.

### **Cleaning the Lens**

A dirty lens will cause sound skipping and, if the lens is very dirty, the CD may not work.

Please use cleaning disc.

### **Using the CD player**

Handle Compact Discs

To remove a CD from its storage case, press down on the centre of the case and lift the disc out.

Hold the disc by the edges. Avoid touching the recorded side of the disc.

### **Loading CDs**

Set the Function Selector to the CD position.

Open the CD cover, put up the CD orientation arm. 20

Place the CD in the compartment with the label side facing upwards.

Put down the CD orientation arm, When the screen displays“----”and flashes. The CD will go round and round, and it will show the total number after 10 seconds.

### **Please note:**

- \* Do not put anything other than a CD in the compartment. Other objects can damage the mechanism.
- \* Do not undraw the CD Orientation Cover when playing CD, it will cause danger.
- \* If nonuse, please put the CD into the bag and settle it .And lid the wooden cover to prevent dust and dust in fall the mecha.
- \* Never insert more than one CD at a time.
- \* If a disc is deeply scratched or too dirty, it may not play.

### **Playing Cds**

- \* Turn the Function knob into the CD position.
- \* After put into the CD disc, LED will indicate total songs number.
- \* Press PLAY/PAUSE to start from the first song ,and LED will display.
- \* After press STOP button, you can draw down the CD Orientation Cover take the CD out. To stop play at any time, press the Stop Button.

## **Pause**

To stop a track temporarily, press the Play/Pause Button. The disc will pause and LED Display flashing at the current play position. The Play indicator light up.

To resume play, press the Play/Pause Button again.

## **Skip Forward or Backward through tracks**

The Skip/Search function can be used at any time during play.

To select the next track,press Forward Skip Button .If you are on the last track of the disc,the player will move to track1.

To go back to the beginning of the current track press Backward Skip Button once.

To go back to the previous track press Backward Skip Button twice.

To play a particular track,load the disc in the CD player and press Forward SkipButton until the track number you want is shown in the LED Display.

Press the Play/Pause Button to play that track.

## **Programmed track selection**

You can set your Mini Tower System to play a selection of tracks from your disc.

### **To select specific tracks**

Make sure there is no CD playing.

Press the PROG Button once. The LED Display“0”and Program LED indicator are flashing.

Press Forward Skip or Backward Skip to display the track number you want.

Press the PROG Button once to select the next track.The previous track is now saved.

Program these steps until all the tracks you want are stored.You can select a maximum of 20 tracks.You can selection a track more than once.

Press the Play/Pause Button.The Program LED indicator light up.

The first programmed track of your selection starts playing.

After all the programmed tracks have been played,the CD Player stops automatically.

To cancel your memorize program,press the Stop Button .

## **Please note**

If during track selection, you press the Play/Pause Button before pressing the playing from the first selected track.

## **Repeat disc play**

You can set your CD player to repeat play a single track,the whole disc or your Programmed track selection.

### **To repeat a single track**

Ensure that the track is first playing by pressing the Play/Pause Button.

Press the Repeat/All Button once.The“Repeat ONE/All”LED indicator flashing to indicate “track repeat”is on.

The selected track will play continuously until you press the Stop Button.

Or press the Repeat/All Button two.

### **To repeat the whole disc**

Ensure that the disc is first playing by pressing the Play/Pause Button.

Press the Repeat/All Button twice. The "Repeat ONE/All" LED indicator light up to indicate "disc repeat" is on.

The entire disc will play continuously until you press the Stop Button.

Or press the Repeat/All Button once.

### **To repeat a programmed selection**

Refer to section titled "Programmed Track Selection" on page 5 and select your tracks.

Press Play/Pause Button to play your first selected track.

Press the Repeat/All Button once to repeat a particular track once. The "Repeat ONE /All" LED indicator flashing.

The programmed track will play continuously until you press the Stop Button.

Or press the Repeat/All Button two.

Press the Repeat/All Button twice your complete selection of programmed tracks will repeat. The "Repeat ONE/All" LED indicator light up.

The programmed tracks will play continuously until you press the Stop Button.


Or press the Repeat/All Button once.

### **CAUTION**

- \* This product uses a laser. Avoid any direct exposure to the laser beam. Use of controls, adjustments or procedures not listed in this guide may result in hazardous exposure.
- \* Use this music system according to the manufacturer instructions only.
- \* Use only as intended.
- \* Keep away from children, it is not a toy.
- \* Risk of electric shock! Do not open.
- \* To reduce the risk of electric shock, do not remove cover (or bottom).
- \* No user serviceable parts inside. Refer servicing to qualified service personnel.

## **Disposal:**

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.

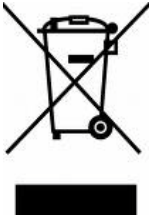

Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH  
Elisabeth-Selbert-Straße 3  
40764 Langenfeld, Germany



If technical support is needed, please call ...  
in Germany 0180 5306363\* or [info@eurotops.de](mailto:info@eurotops.de)  
in Austria 01 230604312 or [info@eurotops.at](mailto:info@eurotops.at)  
in Switzerland 044 2836125 or [info@eurotops.ch](mailto:info@eurotops.ch)

A possible return of products should be addressed to the return address stated on your invoice.

\*14 Cent/minute via German landline. Max. 42 Cent/minute via mobile phone network.

The manual only reflects the technical conditions available under printing.  
Any changes in technology and equipment are reserved.

© 10.09.2012