

USER'S MANUAL

CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.


- Children should be supervised to ensure that they do not play with the appliance.

- For indoor use only.

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

- Batteries (battery pack or batteries installed) should not be exposed to excessive heat such as sunshine, fire or the like.

- Where the MAINS plugs or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

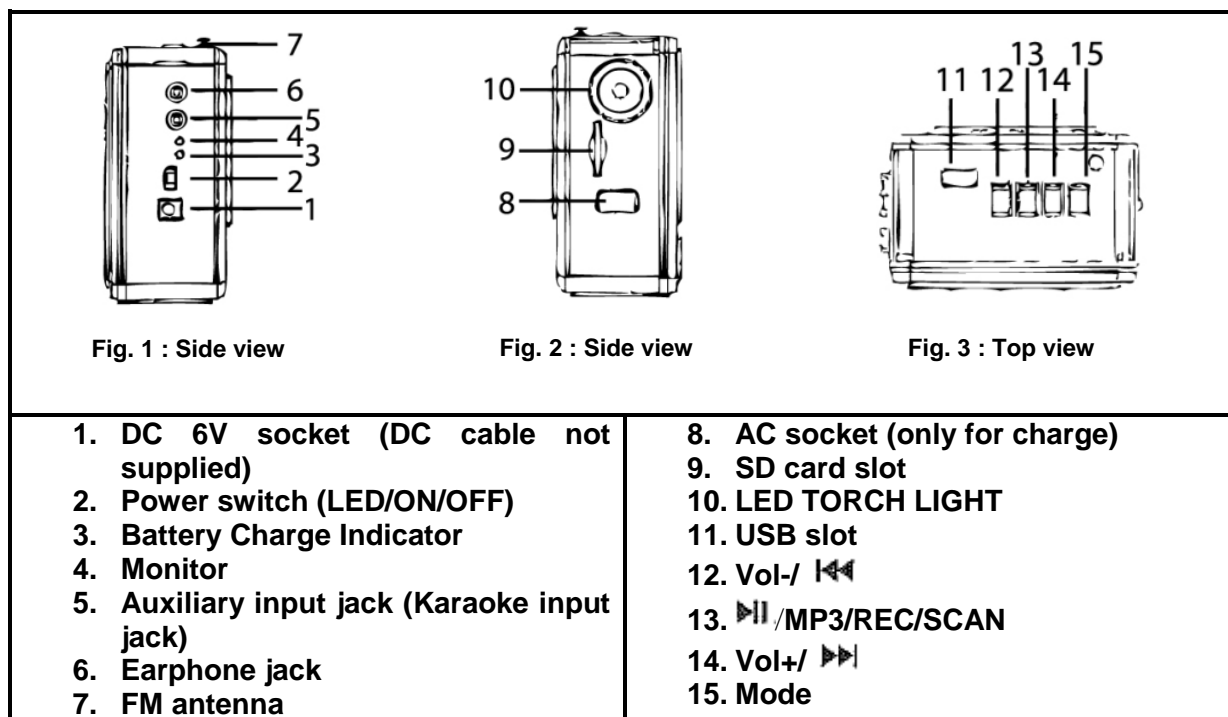

II. OPERATING INSTRUCTION

Before use, you should choose one of the following radio power modes:

- **AC plug:** plug your power cord one side into the AC socket (8) and another side into a standard AC outlet before use.
- **Integrated rechargeable battery:** Use the power cord for battery charging, the battery charge indicator (3) lights. Unplug the AC cable when this indicator (3) is turned off which indicates the integrated rechargeable battery is fully charged.

- The rechargeable battery has to be fully charged before their first use (full charging time is around 8 hours).

- We recommend fully charging your integrated battery every time before use.

- **4xAA batteries:** insert four AA batteries into battery compartment before use.

USE

- Slide power switch (2) to ON position.
- The radio will be play directly if neither the USB/SD nor the wired microphone is inserted.
- If not, you can fast press the mode button (15) to choose between Radio, USB/SD and Karaoke.
- Fast press Vol-/ ◀◀ (12), ▶▶ /MP3/REC/SCAN (13) or Vol+/ ▶▶ (14) for getting previous, pause/replay or next functions use.
- Long press Vol-/ ◀◀ (12) or Vol+/ ▶▶ (14) to increase or decrease the volume.
- In radio play mode, long press ▶▶ /MP3/REC/SCAN (13) to scan and record automatically the radio stations, and then the first scanned channel will be played directly. Please re-do this procedure if needed.
- Slide power switch (2) to OFF position to turn off.
- Slide power switch (2) to LED position to turn on the torch light.

III. RECORDING PROCEDURES

RECORDING FROM RADIO TO USB/SD CARD

- Insert your USB drive or SD card into the USB/SD slot (see figure 4 below for SD card installation).

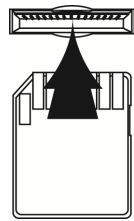


Fig. 4

- Press mode button (15) to choose radio play function.
- And then choose your desired station.
- Fast press **▶||**/MP3/REC/SCAN (13) two times to start the recording. You can see the “REC USB” or “REC SD” icon appears on the LCD screen.
- Fast press **▶||**/MP3/REC/SCAN (13) again to stop the recording and play the recorded program.

RECORDING SOUND TO USB/SD CARD

- Insert your USB drive or SD card into the USB/SD slot.
- Press mode button (15) to choose **USB/SD Card play function**.
- Please choose USB play function if you desire record sound to the USB drive. Please choose SD play function if you desire record sound to the SD Card. If there is no file in your USB/SD Card, the “NO” icon appears on the LCD screen.
- You can also record your sound by using the supplied microphone. However, there is a built-in microphone for sound recording.
- Fast press **▶||**/MP3/REC/SCAN (13) two times to start sound recording. You can see the “REC USB” or “REC SD” icon appears on the LCD screen.
- Fast press **▶||**/MP3/REC/SCAN (13) again to stop the recording and play the recorded file.

NOTE:

- “REC USB” icon means that your sound is recording to the USB drive.
- “REC SD” icon means that that your sound is recording to the SD Card.
- In USB/SD play mode, long press both **Vol-/ ◀◀** (12) and **Vol+/ ▶▶** (14) button at same time to delete the current playing file.
- Please make sure the playing volume is high enough and no extra sound is present for a good recording.

IV. TECHNICAL CHARACTERISTICS

- 220 – 240V ~ 50/60Hz
- 6V $\overline{\text{---}}$ 1.5W
- 4XAA (not supplied) 6V
- Autonomy of the rechargeable battery after full charge: Approx. 3 – 8 hours depending on the volume and other factors.
- Audio format : MP3/WMA/WAV
- Frequency FM: 88 – 108 MHz

V. WARNING ON BATTERIES

- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel hydride).
- Don't mix new and used batteries.
- Don't attempt to recharge non rechargeable batteries.
- Remove rechargeable batteries from the device (if possible) before charging them.
- Rechargeable batteries must always be recharged under adult supervision.
- Remove used batteries.

- Never short the power supply terminals.
- Always use the recommended or equivalent battery types.
- Always pay attention to battery polarity.



WARNING: You should not dispose of this device with your household waste.
A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

If the power cable is damaged, it must be replaced by the manufacturer, his after sales service, or a person qualified in this area in order to avoid any accidents arising.



Marketed by EUROTIPS VERSAND GMBH D-40764 LANGENFELD DEUTSCHLAND