# **Garden Dump**



#### **SAFETY INSTRUCTIONS**

- 1. Always read the safety instructions carefully
- 2. Do not load more than 150 kg in your tank. Be careful not to spill more than 100 kg at once.
- 3. Never allow children to use your garden cart, it is not a toy.
- 4. Always ensure that loads are evenly distributed in the tank.
- 5. Never place objects on the edges of the structure of the carrier.
- 6. Do not use objects that may damage the wheels or the structure of your trolley
- 7. Not use the garden dump if it is damaged. It is imperative to replace any broken parts, missing or damaged by an identical piece.
- 8. Never inflate tires over 30PSI/2.1 BAR
- 9. Keep these instructions for future use

#### **ASSEMBLY**

. It is imperative to check the presence of all parts before starting assembly of your  $\operatorname{Garden}$  dump


Necessary tools to assemble your Garden dump :

. Screwdriver, Phillips screwdriver, socket wrench and adjustable knob

Although not essential, the help of a second person is strongly advised.

## **Step 1:**


Assemble the front part of the holder assembly using the 4 bolts M8x20 panhead, 4 nuts and 4 washers attached

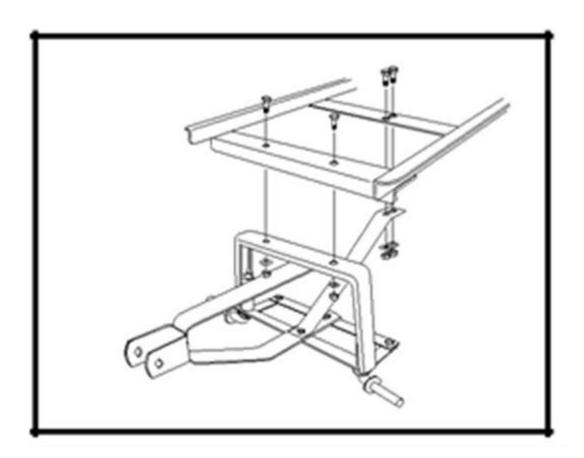

## **Step 2:**


Assemble the bars left and right to support tray using 4 M8x20 bolts, 4 nuts and 4 washers attached.

Make sure to position the support bars before to fix them to the tank.

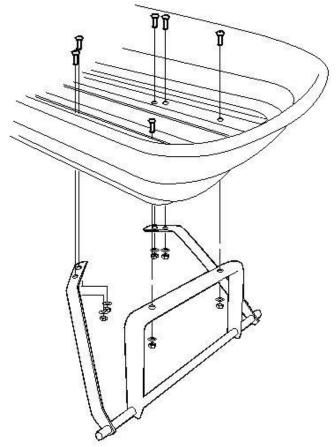


## **Step 3:**

Assemble the back of the tank to the back structure using four carriage bolts, 4 nuts and washer 4joints.

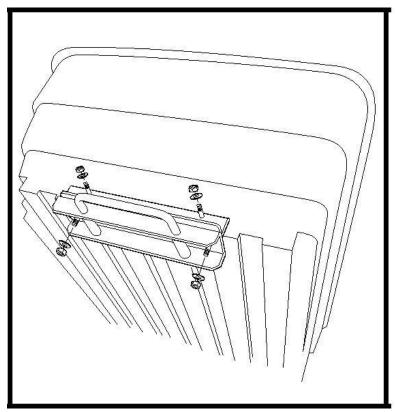


## **Step 4:**

Place the tank in a position to spill. Align the support bars to the carriage structure and attach the assembly. Accordingly, the front, the rear of the structure and the tank are assembled.

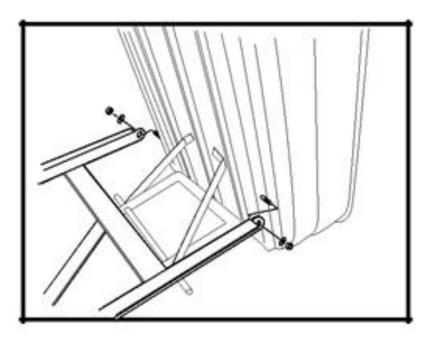


<u>Step</u> <u>5</u>:

Assemble the wheels using the 4 pins M12et 4 joints washer.

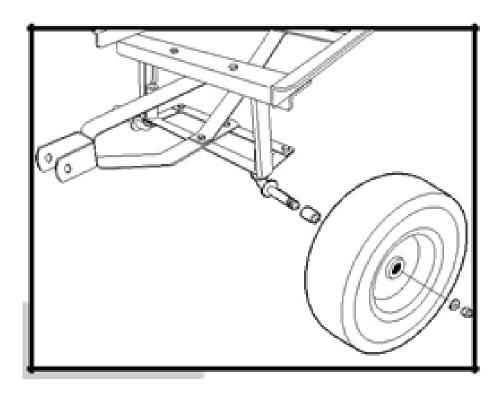


### **Step 6:**

Assemble the handle to the dump using 1 bolt M8x60 round head, 1 nut and washer seal

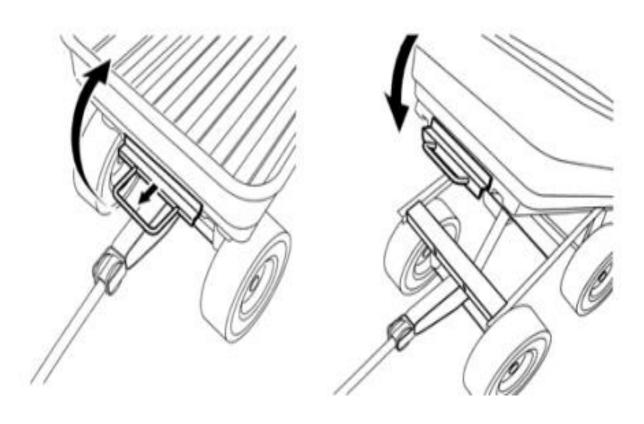

# **Use the discharge function:**

In order to discharge loading tank, pull the handle up to unlock and release the tank back. Once finished, you must return the tray to its original position while ensuring that the tank is locked again in its initial position.

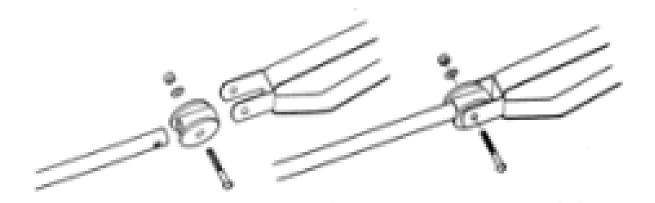

#### B2145 / TC2145

#### LIST OF COMPONENTS

- 1x Tube
- 1x Lock
- 1x Front support
- 1x back support
- 1x Front bracket assembly
- 1x Support rear
- 1x Left bar support
- 1x Right bar support
- 1x handle
- 1x Coupling
- 4x Wheels
- 4x Bolt M8x20
- 4x Bolt M8x20 panhead
- 4x Bolt M8x30 panhead
- 1x Bolt M8x60 panhead
- 3x Small Nuts
- 4x Great Nuts
- 16x seals washer
- 2x Great washer seals
- 4 x Pins

### Warning

Do not exceed the maximum load capacity of  $150\ kg$  and the maximum discharge capacity,  $100\ kg$ .

