


24930

INSTRUCTION MANUAL

JUICER 812.102

220-240V~, 50/60Hz, 400W

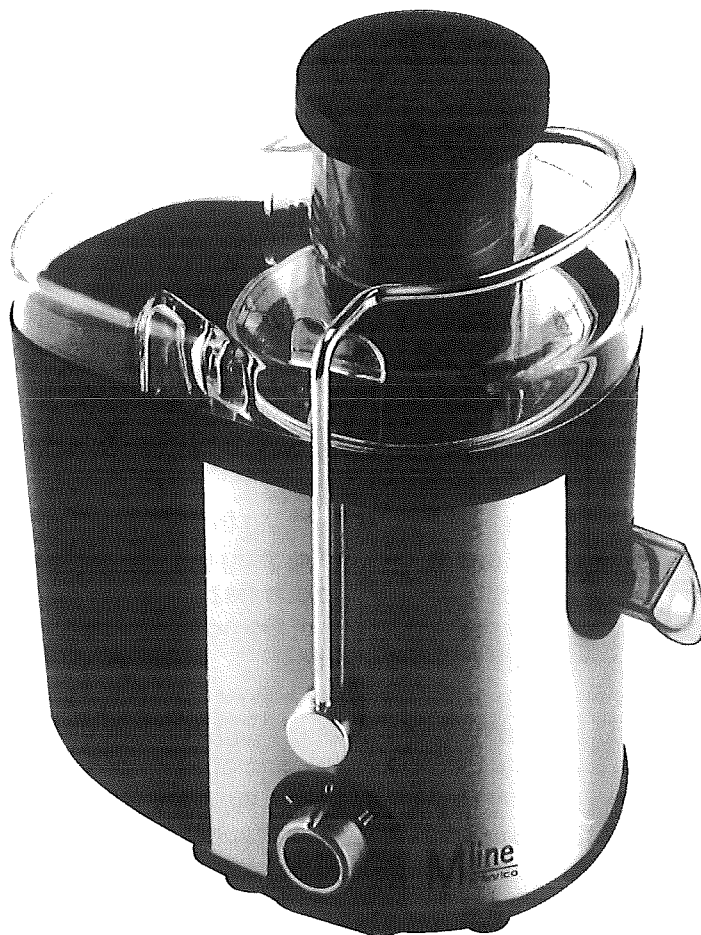


Please read the instruction manual carefully so that you will be able to make the best possible use of the appliance. This manual includes all the necessary instructions and advice for using, cleaning and maintaining the appliance. If you follow these instructions you will be guaranteed of an excellent result, it saves you time and will avoid problems.

SAFETY INSTRUCTIONS

- Please read the instruction manual carefully before using the device.
- Please keep these instructions, the sales receipt and, if possible, the carton with the inner packaging.
- This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person that is responsible for their safety.
- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- To protect children against the dangers of electrical appliances, please make sure that you never leave the appliance unattended. Therefore you have to select a storage place for the appliance where children are not able to grab it.
- Make sure that the cable is not hanging in a downward position.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- The appliance must be placed on a stable, level surface.
- Do not use when the appliance is fallen, if there are any signs of damage or when it leaks.
- Never use the device unsupervised.
- All repairs should be made by a competent qualified repair service.
- Make sure that the appliance is stored in a dry environment.
- It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.
- Check if the voltage of the appliance corresponds to the main voltage of your home. Rated voltage: AC220-240V 50/60Hz.
- This appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.
- The use of accessory that are not recommended by the manufacturer can cause injuries and will invalidate any warranty that you may have.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- Do not use this appliance outdoors.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Unplug the appliance from the socket when changing the spare parts or for maintenance.
- Do not use this appliance with a damaged cord or plug or when the appliance has malfunctions, or has been damaged in any manner. To avoid a hazard make sure that a damaged cord or plug will be replaced by an authorized technician. Do not repair this appliance yourself.
- Do not use this appliance near direct heat sources.
- Unplug the appliance from the socket when you are not using it.
- Using an extension cord or something similar is not allowed.
- Make sure that the cord is not hanging over the edge of the table or counter, does not touch any hot surfaces or is coming directly into contact with the hot parts of the appliance. Do not place the appliance underneath or close to curtains, window coverings etc.
- Do not use this appliance in the bathroom or near a sink filled with water. If this appliance has fallen into the water do not under no circumstances directly grab this appliance, but first pull the plug from the socket.

PARTS DESCRIPTION

1. Pusher
2. Clamp
3. Filling Shaft
4. Lid
5. Pulp container
6. Spout
7. Juice collector
8. Control Button
9. Anti-slip feet

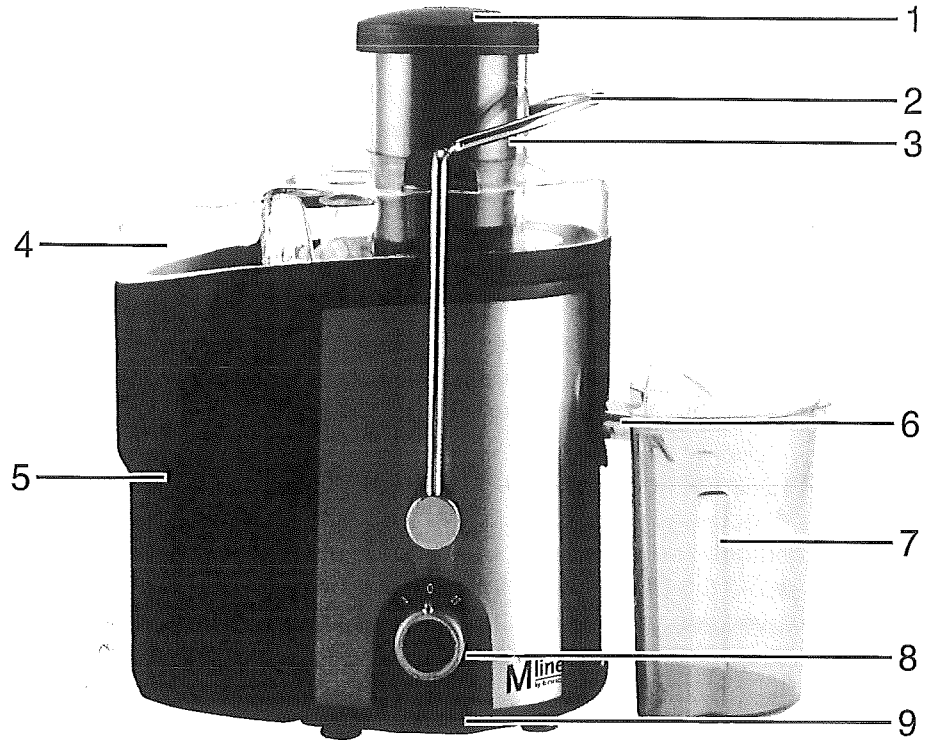

ASSEMBLING

Remove all packaging of the device.

Check if the voltage of the appliance corresponds to the main voltage of your home. Rated voltage : AC220-240V 50Hz.

Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.

Before use

Remove the clamp (No. 2) with a downward motion. Remove the lid (No. 4) of the device. The juice collector (No. 7) is stored in the pulp container (no. 5). Remove all loose parts of the machine and clean it thoroughly before first use. These loose parts are also dishwasher safe. Place the device on a flat clean surface. The device is equipped with anti-slip feet (No. 9) so your device is stable and will not slip easily.

Use

Prepare the processing fruits and vegetables as follows: Only use fruit and vegetables that is properly ripened, otherwise the filter will block up quickly. Wash or peel the fruit or vegetables. Fruits with large seeds or stones should always have these removed first. Those with small seeds (such as apples and pears) can be processed whole, including the skin and core. Fruits with thick rinds (such as citrus fruits, melons, kiwis and beetroots) should be peeled first before processing. Fruit with a thick skin (such as citrus, melons, kiwi, beets), the skin must be removed before they can be processed. Always remove the thick stalks from grapes. In the case of leaf vegetables (such as spinach), the leaves should be rolled up firmly and then push through the filling shaft (No. 3). Always cut fruit and vegetables into pieces small enough to pass through the filling shaft. Fill the shaft to the edge and turn the pusher (No. 1) on top. Place the juice collector (No. 7) under the spout (No. 6) and switch the control button (No. 9) to the desired position. Position 1 for soft fruits and vegetables, position 2 for harder and tougher fruits and vegetables. Press the pusher calm down. The juice runs in the juice collector and the remains fall into the pulp container. If the spout (No. 6) is pressed down the juice runs out, if the spout is pushed up the juice collector (No. 7) can be emptied safely, the juice is held against the spout.

CLEANING AND MAINTENANCE

Before cleaning, always unplug the appliance.

- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Plug in the appliance and turn on the appliance, then rinse the appliance with warm water..
- Do not put any parts in the dishwasher. Never immerse the motor unit in water. The device is not dishwasher proof.

GUARANTEE

- The supplier is not liable for damages occurred through:
 - o In case the appliance has fallen.
 - o In case the appliance has been technically changed by the owner or another third party.
 - o In case of improper use of the appliance.
 - o In case of normal wear of the appliance.
- By executing repairs the original warranty period of 2 years will not be extended, nor the right to a complied new warranty. This warranty is only legal on European soil. This warranty does not overrule the European directive 1944/44CE.
- Always keep your receipt, without this receipt you cannot claim any form of warranty whatsoever.
- Damage caused by not following the instruction manual will lead to a void of warranty, if this results in consequential damages the supplier will not be liable.
- The supplier will not be liable for material damage or personal injury caused by improper use or if the safety instructions are not properly executed.
- Cleaning, as mentioned in this manual, is the only necessary maintenance for this appliance.
- When the appliance should be repaired, make sure that this will be performed by an authorized company.
- This appliance may not be amended or changed.
- If problems arise during the 2 years from the date of purchase, which are covered by the factory warranty, you can go back to the point of purchase to replace it for a new one.
- For questions or compliances please contact your retailer "point of purchase."
- This appliance is covered with a 24 month guarantee starting on the date of purchase (receipt).
- Only material or manufacturing defects are included in this warranty.
- If you wish to make a claim please return the entire machine in the original packaging to your dealer together with the receipt.
- Defects to consumables or parts subject to wearing, as well as cleaning, maintenance or the replacement of these parts are not covered by the guarantee.
- The guarantee lapses in case of unauthorized tampering.

GUIDELINES FOR PROTECTION OF THE ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Packaging

The packaging is 100% recyclable, return the packaging separated.