

# Total Clean Steam Mop

**Réf : CU-038**

## IMPORTANT SAFEGUARDS

### PLEASE READ CAREFULLY

When using an electric appliance, basic precautions should always be followed, including the following:

#### **READ ALL INSTRUCTIONS BEFORE USING THIS STEAM CLEANER**


#### **WARNING-DANGER OF SCALDING**

#### **CAUTION-To reduce the risk of fire, electric shock, or injury:**


1. Check that the main voltage corresponds to the voltage indicated on the rating label, see specifications below.  
220-240V, 50Hz, 1500W, Class I
2. Do not use outdoors.
3. Do not leave the Steam mop unattended while switched on. Turn off the switch and unplug the electrical cord when not in use and before servicing.
4. Do not allow to be used as a toy. Close attention is necessary when used near children, pets or plants.
5. The appliance is not intended for use by young children or infirm persons without supervision
6. Never direct steam towards people, animals or plants, or equipment containing components.
7. Do not immerse the Steam mop into water or other liquids.
8. Do not use with damaged cord or plug
9. Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners.  
Keep cord away from heated surfaces.
10. Never force the plug into an outlet
11. Do not use extension cords or outlets with inadequate current carrying capacity.
12. Do not use wet hand to touch the power cord and plug
13. After use, please promptly pulled out the power cord plug
14. Do not insert any objects into openings. Do not use with any opening blocked.
15. Do not handle plug or Steam mop with wet hands or operate without shoes.
16. Do not use without floor cloth in place. Do not use without water in the water tank.
17. When using on stairs use extra caution.
18. Do not use the steam mop in a close room.
19. Keep your work area well lighted.
20. Never block the steam openings of the product or place it on a soft surface, where the steam openings may be blocked.  
Keep the steam openings free of lint, hair, and the like.
21. Use only as described in this manual. Use only manufacturer's recommended accessories.
22. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been give supervision or instruction concerning use of the appliance by a person responsible for their safety.
23. Children should be supervised to ensure that they do not play with the appliance.

## Products Features:



1.180° swivel head to get into tight spaces and under furniture

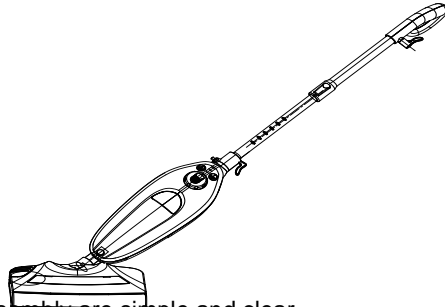


2.Assembly and disassembly are simple and clear

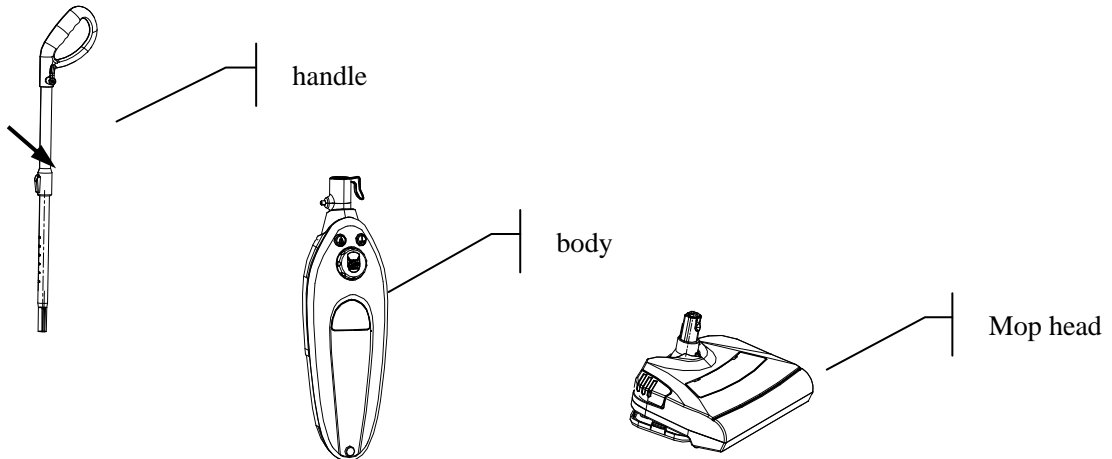

3.Water tank color changes prompt functions state

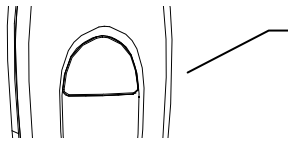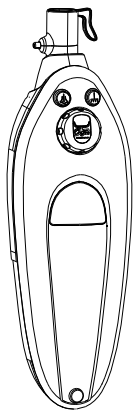

Preheat it will show red

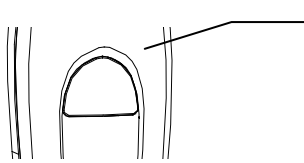


Preheat fish and normal work , the red light will change blue lights


When the water tank no water ,red light will flashing, and the pump stop working, so prolonging the service life of the pump,

4. Smart Select ( four kinds of ground type for your choice)

Simply select your floor type on the Smart Select dial and the mop automatically releases the right amount of steam.

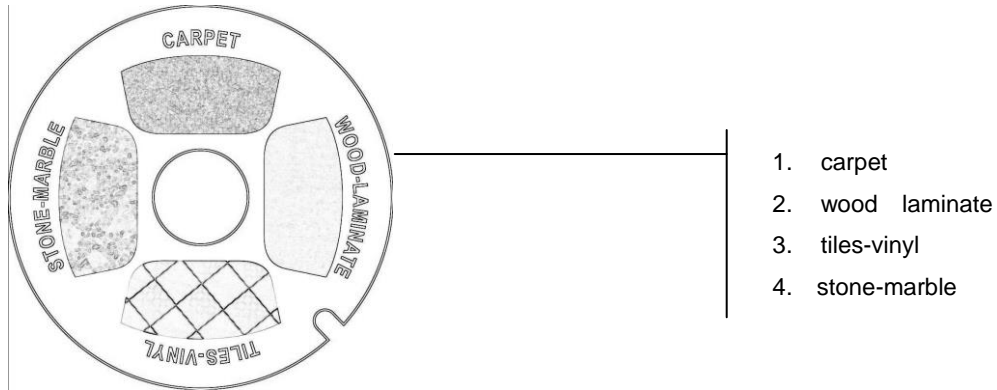


5. Detachable dirt bin , convenient Clearing

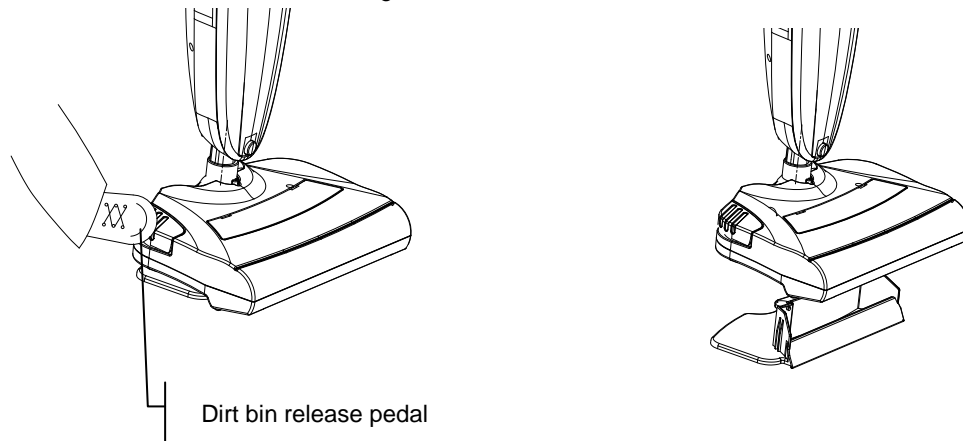

6. Always wear suitable shoes when changing the microfiber cloth on your steam mop and sweeper. Do not wear slippers or open-toed footwear.

Place the front of your shoe onto the microfiber cloth removal tab and press down firmly.

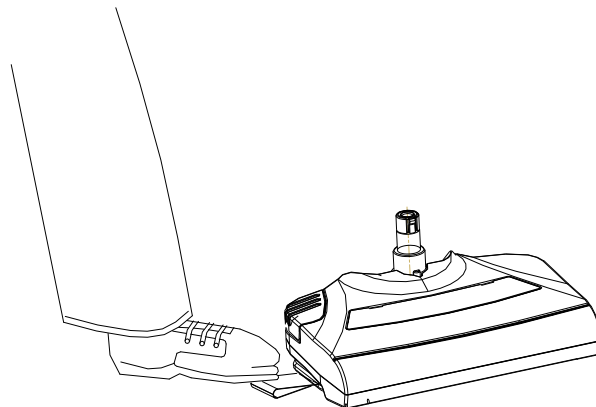




7. When plug in , after 25 seconds , it will work fast
8. Steam output:(last steam five minutes, and take average): 25-30g/minute
9. Protection function, keep the fever internal pressure constant
10. Consistent with the following requirement of safety  
EN60335-1, EN60335-2-10, EN60335-2-54, EN62233

## \* Product specification

  1. Product Name: steam mop and sweeper
2. Item No.: CU-038
3. Voltage: 220-240V, 50Hz
4. Wattage: 1500W
5. Waterproof level: IPX4
6. Grade: Class I
7. Water Tank Capacity: 700ml
8. The steam temperature: 95~110°C
9. When the Steam mop stops emitting steam, this will occur after approximately 30 minutes of use.

## \*Product Components:

- |                      |                             |
|----------------------|-----------------------------|
| 1: handle (A)        | 10. Swivel Joint (J)        |
| 2: cord holder (B)   | 11: Dirt bin (K)            |
| 3: iron tube (C)     | 12: power cord and plug (L) |
| 4: Brush switch (D)  | 13: water tank plug (M)     |
| 5: handle button (E) | 14: sweeper (N)             |
| 6: steam switch (F)  | 15: microfiber cloth (O)    |
| 7: switch knob (G)   | 16: Measuring cup (P)       |
| 8: water tank (H)    | 17: carpet glider (Q)       |
| 9: body (I)          |                             |

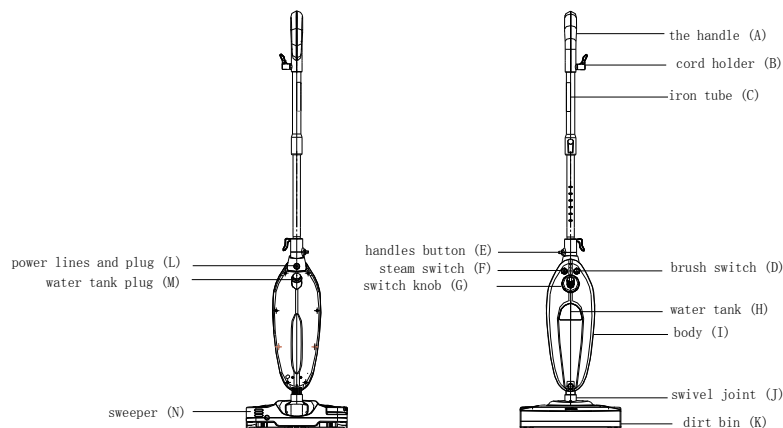

Thank you and congratulations for choosing the Steam mop is a new way of cleaning that is effective and far more hygienic than conventional methods. The Steam mop achieves a high degree of hygienic and increasing cleansing power by converting water into steam using a microfiber floor cloth enhancing absorbency. When contact is made with floor surfaces, dirt and grime can be eliminated in a matter of seconds. Since the Steam mop uses the active power of steam without the use of detergents or soap, it is environmentally friendly.

When used correctly the Steam mop can kill dust mites and some types of bacteria. To disinfect a specific area, position the steamer over the area for a minimum of eighteen seconds. The steam temperature will reach to approximately 95~110°C (203~212°F). Use this procedure to disinfect floors in bathrooms, showers, around kitchen counters, pet sleeping quarters, etc.

## INSTRUCTIONS FOR USE


The Steam mop is designed to thoroughly clean floor surfaces, such as marble, ceramic, stone, linoleum, sealed hardwood floors and parquet.

**WARNING:** On surfaces that have been treated with wax, the wax may be removed by the heat and steam action. Do not use on unsealed wood floors or let unit stand on any wood floor for an extended period of time. This could cause the wood grain to rise. When using on vinyl, linoleum or any other heat sensitive floors, use extra caution. Too much heat can melt down glue in the flooring. It is there for recommended that a sample cleansing be carried out on an isolated area of the floor. It is also recommended that you check the use and care instructions of the surface from the floor manufacturer to ensure suitability to steam cleaning.


**Steam mop uses tap water.** Residents in areas with hard water, should use distilled water for better performance.

## HOW TO ASSEMBLE AND USE

- 1) Attach sweeper ( N ) to body ( I )

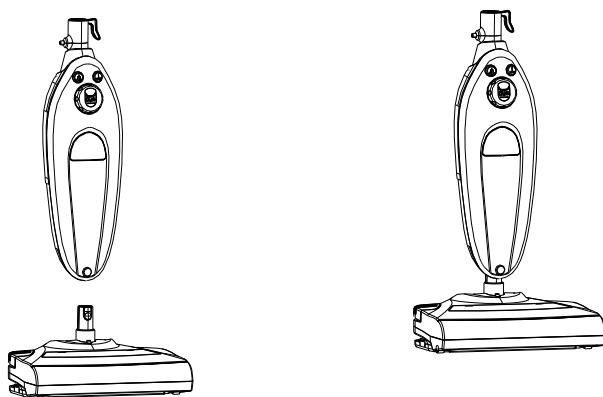

- 2) Insert handle ( A ) down into the body ( I ). Attach handle to body, when heard "da" the sound. Please make sure it is located to the bottom

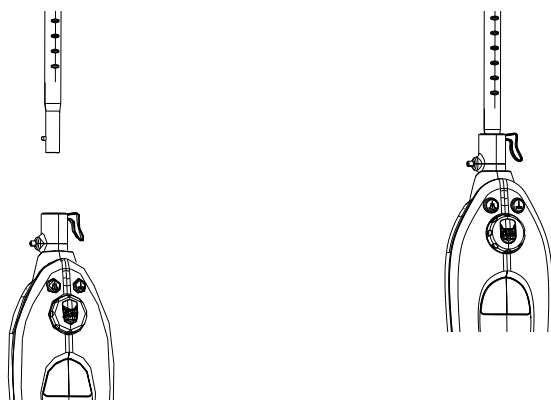


3) stick on Microfiber cloth (O) in the dirt bin (K) below




**Note:** Microfiber cloth (O) is washable intended for one-time use

4) Put dirt bin under the sweeper

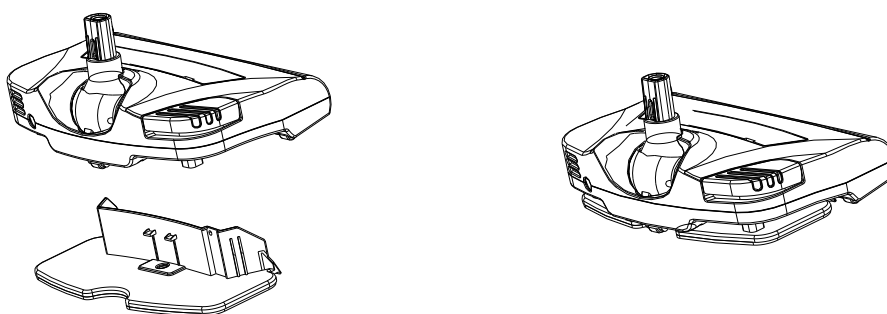


5) Stick on microfiber cloth (O), When using Steam mop on carpets, place the dirt bin (K) (with microfiber cloth in place) over the Carpet Glider (Q)

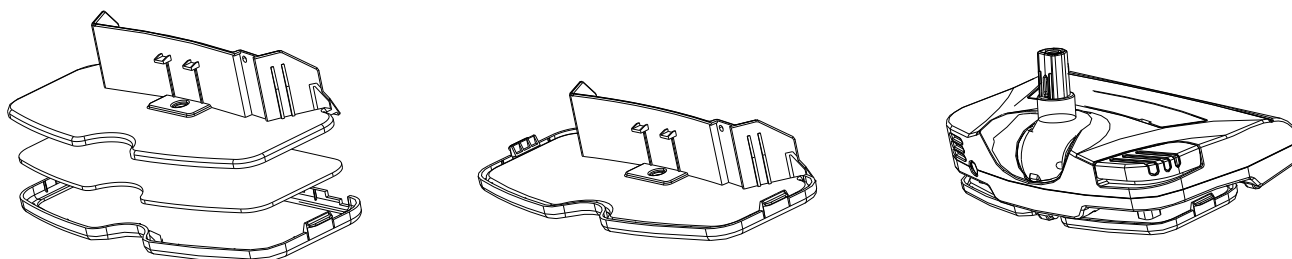

**NOTE:** Do not operate without either Microfiber Cloth Pad (Q)

6) Please fill water into water tank with measuring cup ( P ) (The MAX is 700ml; do not over fill)

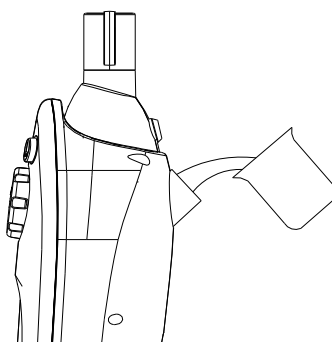

7) Twist the Quick Release Cord Wrap clockwise to unwrap the Power Cord completely and plug into a grounded outlet.

When plug in, water tank (H) Observation window become red, After 25 seconds, Observation window changes blue It meaning the Mop is ready to emit steam.

8) Slowly pass over surface to be cleaned. It is recommended to sweep or vacuum floor prior using the Steam mop.

**NOTE:** It is recommended that another high wattage appliance is not operated on the same circuit to avoid a circuit overload.

**CAUTION:** To sanitize an area of your floor, leave the Steam mop over area for a minimum of 8 seconds, but no longer than 15 seconds. Leaving the Steam mop in a stationary position for a longer period than recommended may cause the build up of a pale residue. This residue can be removed by using a decalcifying product or with a few drops of vinegar. (See troubleshooting guide)

**WARNING: NEVER run the Steam mop without water, NEVER direct steam at any person or animal.**

Use the Steam mop on sealed hard floor only.

When you finish your cleaning, unplug Power Cord from outlet, empty the Water tank, carefully remove the Cloth pad from the head, wind Power Cord around the Cord Wrap and store it upright in a dry area or hang by the storage hook.

**CAUTION:** The Cloth Pad may be very hot. Not for space heating purpose.


## CLEANING AND MAINTENANCE

**CAUTION:** Prior to cleaning or maintenance isolate unit by removing cord from the power socket. Do not immerse the unit in water.

- 1)Microfiber Cloth pad can be machine washed in hot water and tumbled dry.
- 2)Wipe the steamer with a soft cloth.

The Steam mop should only be used with its own specially developed floor cloths and Filter (spare Cloth pads and Filters are available from your retailer).

## Disposal and Warranty Information

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre.

When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories  
Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

#### TROUBLESHOOTING GUIDE

**CAUTION:** Prior to troubleshooting isolate the unit by removing the from the power socket.

## TROUBLESHOOTING GUIDE

**CAUTION:** Prior to troubleshooting isolate the unit by removing the from the power socket.

Problem	Solution
LED Indicator is not on.	Ensure the Steam mop power cord is correctly plugged on. Ensure circuit breaker is operational. Try operating the Steam mop from another power outlet.
The Steam mop will not release steam.	Ensure the water tank is filled with water and located properly.
Pale residue left on the floor.	Caused by leaving the Steam mop in the same position for too long time. Can be removed with household white vinegar or a decalcifying product. Alternatively reheat the area for one minute and residue should be removed. <b>CAUTION: Do not overheat area.</b>