

CHRONOGRAPH WITH STAINLESS STEEL WRISTBAND

Art. No.: 25611

INSTRUCTION MANUAL



EL Light : Press (A)

Display : Normal time display in hours, minutes and seconds with day of the week marked below

the day scale. Press C once to read month and date. Automatic return to normal time display

on release of C. To read alarm time press D. Automatic return to normal time display on release of D.

Time and Date setting : Press B three times - The second will flash, then press C to set seconds to zero.

Press D - Minute will flash and press C to advance minutes

Press D again - hour will flash and press C to advance hours, 12 hours mode or 24 hours model

can be selected when advancing hours.

Press D again - date will flash and press C to advance date.

Press D again - Month will flash and press C to advance month.

Press D again - day will flash and press C advance day.

Press B to finish setting.

Alarm Setting: Press B twice - hour will flash and press C to advance hours

Press D - minute will flash and press C to advance minutes.

Press B to finish setting.

Alarm setting On/Off: Hold C and press D for on/off ()

Hourly Chime Setting: Hold D and press B to set On/Off.

7 days all appear = ON

7 days all disappear = OFF

Stopwatch: The stopwatch measures in minutes, seconds and 1/100 seconds.

For stopwatch function (1), time accumulating

Press B once (the display shows all zero)

Start/Stop-press C once

Reset –when the counter is stopped by pressed C, press D to reset. All counter will be reset to zero.

For stopwatch function (2), split time (lap time)

Start- press C once

Whilst stopwatch is running, press D to freeze lapsed time, press D again to resume recording time.

Reset - Once timing has been stopped by pressing C.

Press D again to reset.

Press B to return to normal time.

To change the battery of the LCD display:




1) Remove the case back

2) Replace the old battery with new battery. Battery type is CR2016

3) Screw back

4) Fix back the case back

To change the battery of the analogue watch :

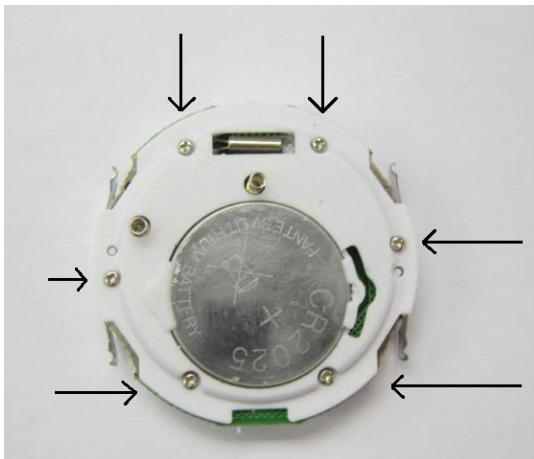

- 1) Remove case back
- 2) Unscrew the 6 screws as shown
- 3) Replace old battery with new battery. Battery type is SR626 or 377
- 4) Screw back the 6 screws.
- 5) Fix back the case back.

DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmental friendly way by putting it in the appropriate recycle waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
 Elisabeth-Selbert-Straße 3
 40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63* or info@eurotops.de

in Austria 01 . 230 60 43 12 or info@eurotops.at

in Switzerland 044 . 28 36 125 or info@eurotops.ch

in the Netherlands 026 . 37 36 333 or info@eurotops.nl

in France 0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

