

## RECHARGEABLE SHAVER

## INSTRUCTIONS

**SAFETY INSTRUCTIONS**

Before using the device, read carefully the instructions and keep them for further consultation.



**This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are supervised.**

1. Use only the adapter provided by the device.
2. In case of failure or damage of the adapter, it must be replaced with an original adapter.
3. The use and storage temperature of the device must be between 5 and 35 °C.
4. Do not expose the device to water or humidity.
5. Unplug the device before cleaning the shaver with running water. Be very careful when using warm water. Check if the water is not too hot, so you do not burn your hands.
6. Wash only the head of the shaver, the rest of the device must not be wet.
7. Please keep away from the reach of children.


**CHARGE**

Before recharging, make sure that the device is turned off.

- Introduce the socket of the device in the shaver.
- Connect the adapter to the power socket
- Recharging takes about 6 hours.
- Once recharged, the shaver can be used 10 days, 3 minutes per day.

**USE OF THE SHAVER****Shaving**

- Press down the ON/OFF button on the ON position.
- Hold the shaver as shown in the picture and begin shaving.

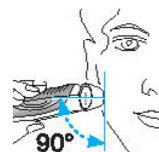

Begin shaving softly touching your face. Stretch your skin using your other hand and move the shaver towards your chin. You can press harder as your skin gradually gets accustomed to the shaver. Nevertheless, pressing too hard does not increase the shaving quality.


### Clippers (for shaving the temples and the moustache)

- In order to open the blade of the clippers, you must slide the tongue towards the shaver
- The clippers work at the same time with the shaver

### CLEANING


For a good shaving, the shaver must be clean on regular basis.

- Unplug the power cord of the shaver
- Switch the ON/OFF button on the OFF position
- You must clean first the bottom of the device, using the brush supplied. Then, continue to clean the rest of the device and the hair compartment using the brush.
- Remove the protection grid and clean it with running water
- Remove any trace of water using the paper towel.

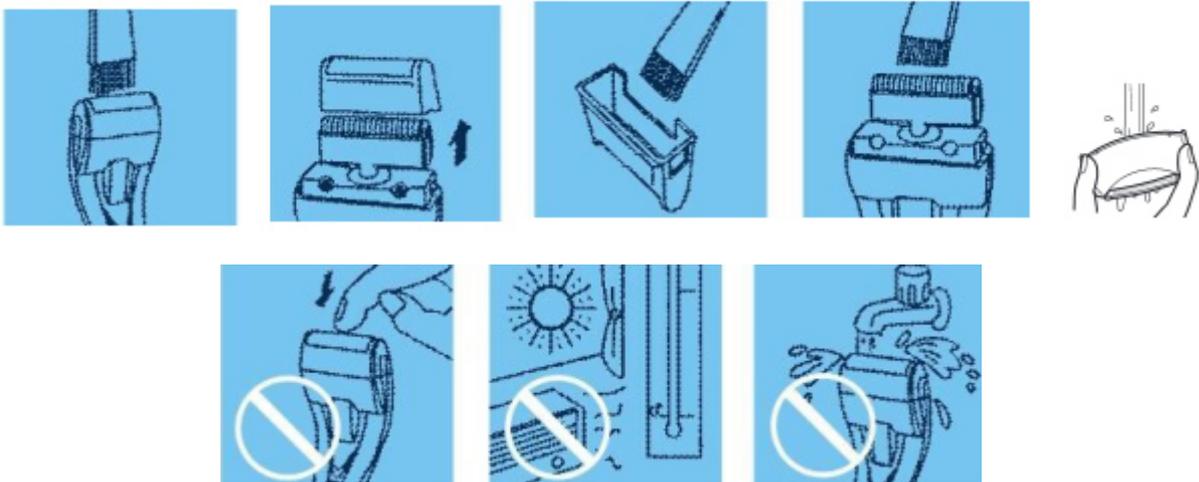


### REPLACING THE PROTECTION GRID OF THE SYSTEM AND THE INTERIOR BLADES

#### Replacing the protection grid of the system

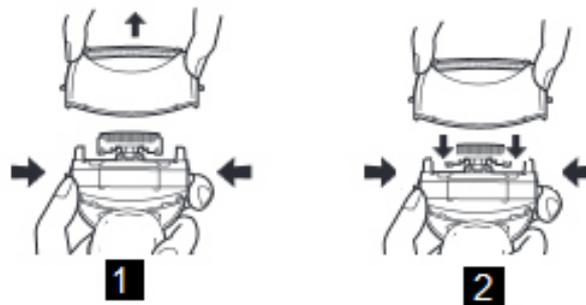

#### Replacing the interior blades

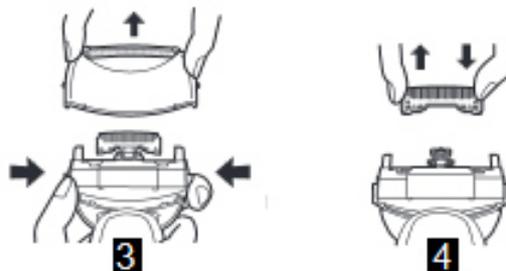

### TECHNICAL CHARACTERISTICS


- Power supply: 230V ~ 50 Hz 3W IPX0 Class II
- Battery: NiMh, 3 V 300 mA
- This product is for domestic use only

## REMOVAL OF THE INTEGRATED RECHARGEABLE BATTERY

### **Warning** regarding the battery:

High risk of fire, explosion and serious burn. Do not disassemble, do not warm at 100°C (212°F) and do not throw in the fire.

- Remove the integrated rechargeable battery before throwing the shaver. Do not disassemble and do not introduce the battery in order to use the shaver again. This may cause fire or electrocution. Take it to a specialized service center.
- Unplug the power cord before removing the battery
- Follow the steps 1 to 4, take the battery and remove it.

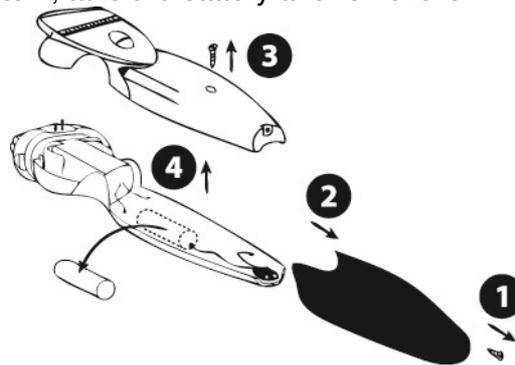

## WARNING ON BATTERIES

- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel hydride).
- Don't mix new and used batteries.
- Don't attempt to recharge non rechargeable batteries.
- Remove rechargeable batteries from the device (if possible) before charging them.
- Rechargeable batteries must always be recharged under adult supervision.
- Remove used batteries.
- Never short the power supply terminals.
- Always use the recommended or equivalent battery types.
- Always pay attention to battery polarity.

WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

If the power cable is damaged, it must be replaced by the manufacturer, his after sales service, or a person qualified in this area in order to avoid any accidents arising.



Marketed by EUROTUPS VERSAND GMBH D-40764 LANGENFELD – Germany  
Made in PRC