 


Illuminated Radio Controlled Alarm Clock

Art No.: 26 478

Instruction Manual

MAIN UNIT



1.SET 2.ALARM
7.BATTERY COVER

3.UP 4.DOWN

5.WAVE 6.SNOOZE/LIGHT

FEATURES



- Receiving RC time automatically (DCF only).
- Calendar from 2000 – 2099.
- 7 language weekdays display: English, German, French, Italian, Dutch, Spanish, Denmark.
- 12/24 hours selectable.
- Alarm & Snooze functions.
- LED backlight
- Temperature display.
- Indoor temperature range: 0°C - 50°C.

BATTERY INSTALLATION

1. Remove the battery cover.
2. Insert 1 X AA battery.
3. Replace cover.

SET TIME

AUTOMATIC


Once the battery is installed, the clock will begin searching for a signal. Within 3-8 minutes the clock will receive the RC signal and set itself to the correct time.

MANUAL

1. Press and hold "SET" key for 2 seconds to enter into time setting mode.
2. The figure to be set will flash.
3. Press "UP" or "DOWN" key to change the time/date.
4. The order is: 12/24-hr format, Time zone, Hour, Minute, Year, Month, Date, language weekdays.
5. Press "SET" again to confirm.
6. If you want to switch to auto mode then press "WAVE" to save & exit. This will revert to the RC mode.
7. If no keys are pressed for 30 seconds, it will automatically exit to the time mode.

ALARM & SNOOZE

ALARM


1. Press "ALARM" once to switch alarm on/off,  indicate alarm is on.
2. Hold "ALARM" key for 2 seconds to enter into alarm setting mode.
3. The figure to be set will flash.
4. Press "UP" or "DOWN" to change the alarm.
5. The order is: Hour → Minute
6. Press "ALARM" again to confirm and exit setting mode.
7. If no keys are pressed for 30 seconds, it will automatically save the new values and exit to time mode.

SNOOZE FUNCTION

Alarm ring:

- a) Duration: 2 mins.
- b) Ringing:

Duration (Sec)	Beep/Sec
0 -10	1
11 - 20	2
21 - 30	4
> 30	Continuous

- c) When alarm ringing, press "SNOOZE/LIGHT" key once for a 5-min snooze time, the "" will flash, press any other key will cancel snooze, but alarm ring again after 24 hours.

TEMPERATURE




1. The indoor temperature will display within 3-8 minutes automatically after set up.
2. Press "DOWN" to switch °C/°F.

RCC Receiving

RCC receiving condition:

- a. RC signal received automatically when starting up clock or reset. The clock will try to receive RC signal between 1 AM and 5 AM;
- b. On time mode, press "WAVE" key to enter into RC mode directly.
- c. RC signal receiving automatically every day:

RCC Receiving Icon:

- a. When attempting to detect RC signal or when signal is too weak, icon  will flash;
 - b. When signal detected, icon  will flash;
 - c. When signal successfully received, the icon  will stop flashing.
- To cancel RC signal receiving, press "WAVE" key once.
 - If no signal received on the day, it will try again at 1AM next day.
 - If alarm rings while receiving RC signal, it will auto exit RC signal receiving.

- When receive DST, the DST symbol will display on the LCD screen

7 LANGUAGE WEEK DISPLAY

German	English	Italian	French	Dutch	Spanish	Denmark
GER	ENG	ITA	FRE	DUT	SPA	DAN

WARNING!

- Do not clean any part of the product with benzene, thinner or other solvent chemicals. When necessary, clean it with a soft cloth.
- Never immerse the product in water. This will damage the product.
- Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.
- Do not tamper with the internal components.
- Remove the batteries if this product is not used for a long period of time.
- Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
 Elisabeth-Selbert-Straße 3
 40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63* or info@eurotops.de
 in Austria 01 . 230 60 43 12 or info@eurotops.at
 in Switzerland 044 . 28 36 125 or info@eurotops.ch
 in the Netherlands 026 . 37 36 333 or info@eurotops.nl
 in France 0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.