

Electronic Ceramic Heater

USER MANUAL

Cat. No.: 26583

230V~ 50Hz 1800W


IMPORTANT SAFEGUARDS

1. Please read these instructions carefully before using the appliance.
2. Check that your mains voltage corresponds to that stated on the rating plate of the appliance.
3. Keep out of reach of children or incompetent persons.
4. From time to time check the cord for damages. Never use the appliance shows any signs of damage but have it checked and repaired by a competent qualified service. Should the cord be damaged, it must be replaced by a competent qualified service.
5. Only use the appliance for domestic purposes and in the way indicated in these instructions.
6. Never immerse the appliance in water or any other liquid for any reason whatsoever. When cleaning the appliance, refer to the instructions in the paragraph "Cleaning and care" because the water penetration through the openings can be very dangerous for your appliance.
7. Never use the appliance near hot surfaces.
8. Before cleaning and when you do not use the appliance, always unplug the appliance from the power supply .Do not attempt to remove the plug from the wall socket with wet hands.
9. Never use the appliance outside and always place it in a dry environment.
10. Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
11. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
12. Stand the appliance on a stable surface so that it cannot fall.
13. Do not place the appliance under a power socket. The power socket must not be in the hot airflow of the appliance.
14. Always position the heater in such a way that inflammable materials (such as curtains) cannot be ignited. Ensure at all times that the unit is placed solidly on its base. Make sure that the air inlet and outlet openings are not blocked..
15. Do not operate the heater near baths, showers, washbasins, swimming pools or any other water container. It must be impossible to reach the commands of your appliance when you are in contact with water.
16. The temperature of the grids may be very high when the appliance is in use. Avoid contact with the skin.
17. Never use the appliance near inflammable or explosive materials.

18. Do not insert any objects through the grille or into the interior of the appliance.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities,
20. or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the
21. appliance by a person responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.
23. Competent qualified service: after sales department of the producer or importer or any person who is qualified,
24. approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the
25. appliance to this service.

Components name

1. Thermostat
2. Function selector
3. Oscillation Control Button
4. Body
5. Guard
6. Tilt switch
7. Pilot light

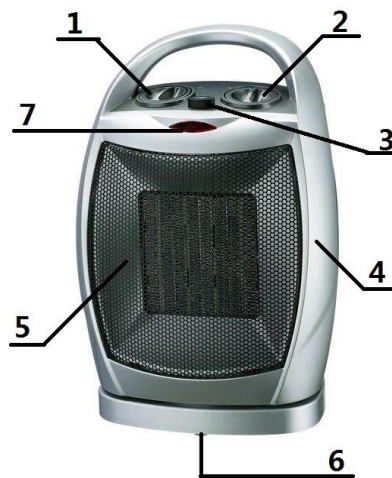

IN OPERATION, NEVER COVER THE HEATER OR USE IT TO DRY LAUNDRY!

USE

The heater should only be operated at a minimum distance of 50cm from any wall or other object. Position the air flow in order to optimize the heating of the room. Avoid corners, small volumes, floors and ceilings.

OPERATION

When the appliance is switched on for the first time, a slight smell may be emitted. Please ensure sufficient ventilation. This smell will disappear very quickly.

FUNCTION SELECTOR

0 OFF

 Fan without heater

I 900W (low heat output)

II 1800W (full heat output)

Thermostat

(-) OFF

(+) Maximum

If you selected low or full output, choose the desired temperature with the thermostat. With the thermostat, the temperature can be regulated sleeplessly. When the desired temperature is reached, the unit will automatically switch off. Once the temperature has fallen below the per-set level, the heater will switch on again.

A pilot light will allow you to check the thermostatic regulation. When the appliance is heating, this pilot light will be on. It will go out when the desired temperature is reached.

Oscillation

This appliance also has an oscillation function. To switch the function on, press the oscillation switch. To stop it, press the oscillation switch again.

OVERHEAT PROTECTION

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheat, e.g. due to the total or partial obstruction of the grids. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove the object that is obstructing the grids. Then switch it back on as described above. The appliance should operate normally.

Should the problem persist, please contact the nearest customer service.

ANTI-TIPPING OVER SAFETY

Disconnects your appliance when it is tilted or tipped. If your appliance falls, switch it off, replace it correctly and switch it on again.

CLEANING AND CARE

1. Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
2. To avoid the risk of electric shock, do not clean the heater with water and do not immerse it.
3. The housing may be wiped with a slightly damp, lint-free cloth.
4. If necessary, dust particles accumulated in the air outlet openings may be removed with a vacuum cleaner.
5. DO NOT use soap or chemicals which may damage the housing of the heater.

DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH
Elisabeth-Selbert-Straße 3
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany 0180 . 530 63 63* or info@eurotops.de

in Austria 01 . 230 60 43 12 or info@eurotops.at

in Switzerland 044 . 28 36 125 or info@eurotops.ch

in the Netherlands 026 . 37 36 333 or info@eurotops.nl

in France 0892 . 700 470** or info@eurotops.fr

* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

**34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

The manual only reflects the technical conditions available under printing. Any changes in technology and equipment are reserved.

© 24.08/2015