

SB214E/RSCX-3018 WASHABLE SHAVER



Safety instructions

Before using the product, please read carefully the operating instructions and keep properly for future reference.


1. Only the included charger can be used.
2. If the charger is damaged, it should be replaced with a new one with the original type to avoid the danger.
3. The temperature for the product's charge and storage should not exceed 5 °C - 35 °C.
4. Make sure the charge will not become damp.
5. Do unplug the charger before cleaning the shaver with running water. Do be careful when using hot water. Do remember to check the water is not too hot to avoid doing harm to hands.
6. Only the shaver head can be washed and the body should not be soaked in water.
7. This product cannot be used by physically distempered, sensorially or mentally disordered, or inexperienced persons (including children), unless they are under supervision or instruction by people in charge of their security.
8. Please supervise the children to ensure they do not play with the appliance.

Charge

Make sure the product is power-off before the charge. The charge lasts about 3 hours. Plug the charger in the

socket when shaver without power. It's better for the product not to be connected to the power supply for more than 24 hours.

1. Insert the product charger into the shaver (Fig 1).
2. Plug in the charger.
3. The indicate-light will being on when charging.(Fig 2).
4. After the full charge, unplug the charger and also pull out the product's plug from the shaver.

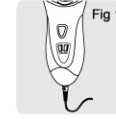

Information change of LCD

1. Charge
When you plug in to charge the product, the symbol "00" in LCD will light up. When the symbol "03" is flashing, it means the product is charging.
The number displaying on LCD means the minute number of available shaving, which will increase during the charge.
2. Full charge of battery
After the full charge of battery, the number on LCD will become 40, the maximum minute number of available shaving.
3. Remaining shaving time




The number on LCD means the remaining shaving time (min). A shaver with the full charge can work for about 40 minutes, which is subject to your whiskers and shaving mode.

4. Low energy of battery
When the minute number on LCD becomes 03, "⚡" will appear and flash, which means the battery is in a state of low energy.
5. Cleaning reminder
When the symbol "🧼" appears on display and flashes, it reminds you of cleaning the shaver.

How to Use Product

Shaving

1. Push the button ON/OFF to start the shaver.
2. Make the shaver head part move quickly on the skin in straight lines and circles (Fig 3).
3. Cover the shaver's protective cover after each use to avoid being damaged (Fig 4).
4. The shaver can run for ten days with 3 minutes per day after a full charge.

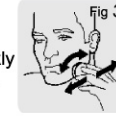


Trimming
Used for trimming temple and mustache.

1. Push the slide face upwards to open the hair trimmer, which can be started as the shaver start (Fig 5).

Cleaning & Maintenance

To ensure a better shaving effect, the shaver must be cleaned regularly.


The easiest and most sanitary way to clean the product is to wash the shaver head part and the whisker storeroom with water each time after using it.

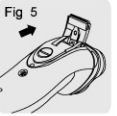

Do be careful when using hot water. Do remember to check the water is not too hot to avoid doing harm to hands.

Every day: the shaver head part and the hair storeroom.

1. Cut off the power supply of the shaver, then unplug the charger and also pull out the product's plug from the shaver.
2. Press on the button RELEASE (1) to open the shaver head part (2) (Fig 6).
3. Clean the shaver head part and the hair storeroom for some time with hot running water (Fig 7).

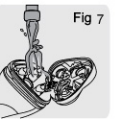

Make sure the inside of both the shaver head part and the hair storeroom has been cleaned thoroughly.

4. Wash the product's surface (Fig 8).
5. Close the shaver head part and throw off surplus water.

Do not wipe the shaver head part with a towel or paper tissues, which may cause damages to the shaver head.

6. Open the shaver head part again and remain so to dry up the product (Fig 9).



You can also use the brush included to clean the hair storeroom.

Here water should not be used.


Shaver head care(once per half a year)

1. Open the shaver head part, then pull out the shaver and unload the fixed mount (Fig 10).
2. Clean the blade and the foil with the brush included (Fig 11).


Do not clean multiple sets of blade and foil at the same time because they are integrated. If the blade and the foil are matched improperly due to carelessness, it'll take a couple of weeks for the product to return to the best shaving performance.

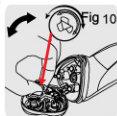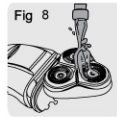

3. Load the shaver head and then the fixed mount back to the shaver head part (Fig 12). Make sure the dent on the edge of the shaver head part (foil cover) matches the bulge of the floating ring correspondingly and the bulge of the shaver head is just inserted into the dent on the center of the foil cover.

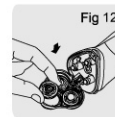

4. Reload the shaver head part on the shaver and then close it.

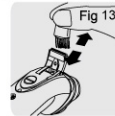

Trimmer

Clean the trimmer each time after use.

1. Cut off the power supply of the shaver, then unplug the charger and also pull out the product's plug from the shaver.
2. Clean the trimmer with the brush included (Fig 13).
3. Lubricate the trimmer teeth with a drop of sewing machine oil once every six months (Fig 14).



Change



Change the shaver head once a year to get the best shaving effect. The shaver has a long service life if not damaged for human factors.

The damaged or abraded shaver head can only be replaced with Our company SPEED-XL shaver head

1. Cut off the power supply of the shaver, then unplug the charger and

also pull out the product's plug from the shaver.

2. Open the shaver head assembly (Fig 15) Rotate the loosening button of shaver head counterclockwise by 60 to unload the spacer. Unload the old shaver head then unload the fixed shelf.
3. Put the new one into the foil screen (Fig 16), align the shaver head with small holes to the center of foil screen and at the same time make sure the shaver head accords with the shaver shaft. To load the spacer, confirm that the shaver head aligns to the central shaft of foil screen with small holes and then rotate the loosening button of shaver head clockwise by 60. Make sure the marginal depression part of shaver head assembly (foil screen) corresponds to the bulge of floating ring and the bulge of shaver head is inserted into the depression part on the center of foil screen.
4. Close the shaver head part.

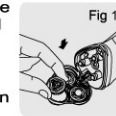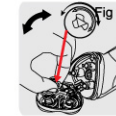

Accessories

The following accessories are included with the product: Charger; Brush; Cloth bag. Charger Stand

Technical characteristics

230V ~, 2.4V ~, 3W, class III

Attention

- The battery should not be removed until it is not completely discharged.

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the mains supply when removing the battery. You should unplug the charger and then remove the plug that connects to the shaver.
- Do not plug the shaver after removing the battery.
- The battery must be disposed of safely.

Procedure to remove the battery

Before starting any operation on the removal of the battery, please read the safety instructions provide above and follow it.


1. Remove the small black cap (located on the back and bottom the shaver) with the tip of a pen to see the screw (see figure 18 and 19 below).
2. Do the same for the black cap under the trimmer button (figure 18 and 19).

Note: To see the cap, push the trimmer button up (see figure 17).

3. Loosen the screw with a screwdriver.

The body of the shaver open in two and the battery is visible.


4. Cut the red and black wires with a wire cutter.
5. Secure the battery with 2 fingers and pull hard on the battery to remove it from its housing.
6. Remove the battery.

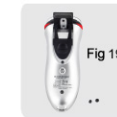

WARNING: You should not dispose of this device with your household waste.

A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place.

These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

 This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

If the power cable is damaged, it must be replaced by the manufacturer, his after sales service, or a person qualified in this area in order to avoid any accidents arising.