

RADIO CONTROLLED WATCH


USER'S MANUAL

Function description of pure pointer

I Function introduction:

- Radio wave automatic receiving function
- Working voltage: 3V

II. PRODUCT DESCRIPTION

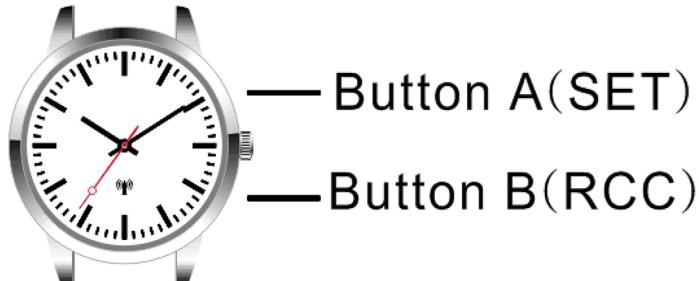

FIRST TIME USE

Press and hold button B for 3 seconds to activate automatic signal reception. Because the automatic receiving function will be closed for consecutively 3 days not reception.

III

.Press A button for 6 seconds to enter the time setting, stop time, and then press B key to adjust the time, press B key for two seconds, pointer run,press B button, the pointer to the second step. Time to press B key. Then press A button to normal.

. If you do not receive or enter the time in a time before, not indicate any other time information

. Press A button to for 6 seconds, enter hour ,minutes, seconds zero correction state, according to the B button to run and step pointe

IV. MANUAL TIME SETTING

Under normal time mode



- Press and hold the button A for 6 seconds enter into time setting mode and the second hands stop rotating.
- Press the button B once to adjust by second. Press and hold the button B for 3 seconds, the second hand rotate at high speed.
- Press the button B once to stop it and press the button A once and then press the button B to adjust time by count-clockwise.
- If near to the correct time, you may press the button B one by one to adjust time.
- Press and hold the button A for 3 seconds to finish. The watch returns to normal time mode if without any pressing within 1 minute.

V.Daylight saving time(DST)setting.

- Press the button A and B above 3seconds till the second hand stop, and then enter into DST setting mode.
- Press the button A to set the DST mode, and then press button B one by one to set DST mode.(AUTO-ON-OFF)
 - a.When the seconds point to 53seconds,it mean the time changes automatically when summer comes.
 - b.When the seconds point to 55seconds,it mean activation of DST.
 - c.When the seconds point to 57seconds,it mean deactivation of DST.
- Note:When you switch the DST mode ,the Daylight saving time automatically advances the time setting by one hour.
- After setting up the Daylight saving time ,press the button A, and the the hand will come back to nomal time.



Figure1:DST-AUTO

Figure2:DST-ON=Activation of DST.

Figure3:DST-OFF=Deactivation of DST.

Make sure the watch is running normally before re-calibrating the shifted second hand.

- Press and hold the button B for 3 seconds to check the position of the second hand.
- Press and hold both the button A and B for more than 7seconds, the second hand will rotate at high speed.
- Press the button B once to stop it. Press and hold the button B for 3 seconds speeding.
- When the hands near to 12:00, press the button B one by one to adjust by second to make sure three hands are all aligned at 12:00 position to finish the re-calibration.
- When the re-calibration is finished, the watch enter into manual reception function (operation can refer to section V Manual signal reception). Without any operation within one minute, the watch can search the signals automatically. The watch needs always 3 – 7 minutes to go back to normal time mode.

IX.Power on reset pin

When the power is reset, remove the battery. Refer to the above VIII steps for the calibration of the needle.

X. SPECIFICATIONS

- Battery : 1 X CR2016 button cell, DC 3V ===

XI.WARNING

- Always make sure the crown is fully return to the case to ensure water resistance.
- DO NOT operate the crown or buttons in water or when the watch is wet.
- To prolong the appearance of your watch, avoid contact with the following :Perfumes, hairspray, cosmetics, detergents, adhesives and paints as they cause discoloration, deterioration and damage.
- To help prevent possible damage from perspiration, dust and moisture, periodically wipe your watch with a soft dry cloth.
- To ensure lasting durability please take note of the following points: Never attempt to open the case of your watch. Batteries should be replaced by a qualified technician.
- Your watch is shock resistant, however please be careful not to drop or hit your watch against hard surfaces, as this will cause damage.
- If the watch is normal, press A button once, the second hand indicates other location, this phenomenon is normal, after 7 seconds, watches back to normal

XII. WARNING ON BATTERIES

- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel hydride).
- Don't mix new and used batteries.
- Don't attempt to recharge non rechargeable batteries.
- Remove rechargeable batteries from the device (if possible) before charging them.
- Rechargeable batteries must always be recharged under adult supervision.
- Remove used batteries.
- Never short the power supply terminals.
- Always use the recommended or equivalent battery types.
- Always pay attention to battery polarity.

XIII. TIME ZONE SETTING



Local time zone indicating position

- 1.Hold and press the button A and B about three seconds until the second hand stop rotating, and enter into the time zone setting mode. Entering into the time zone setting mode, and the second hand pauses at press present Time zone.
- 2.Press the button B one by one to select your current time zone.
- 3.Press the button A twice to return back to the normal time mode.

4.24 time zone selection.

City	The abbreviation of city	Time Zone	The second hand indicating position	Receiving number
Midway	MDY	-11	The 37 seconds	
Honolulu	HNL	-10	The 39 seconds	
Anchorage	ANC	-9	The 41 seconds	WWVB
Los Angeles	LAX	-8	The 43 seconds	WWVB
Denver	DEN	-7	The 45 seconds	WWVB
Chicago	CHI	-6	The 47 seconds	WWVB
New York	NYC	-5	The 49 seconds	WWVB
Caracas	CCS	-4	The 51 seconds	
Rio De Janeiro	RIO	-3	The 53 seconds	
Recife	REC	-2	The 55 seconds	
Azores	AZO	-1	The 57 seconds	
London	LON	0	The 59 seconds	MSF/DCF
Paris	PAR	+1	The 1 seconds	DCF/MSF
Cairo	CAI	+2	The 3 seconds	DCF
Moscow	MOW	+3	The 5 seconds	
Dubai	DXB	+4	The 7 seconds	
Karachi	KHI	+5	The 9 seconds	
Dacca	DAC	+6	The 11 seconds	
Bangkok	BKK	+7	The 13 seconds	
Beijing	BJS	+8	The 15 seconds	BPC
Tokyo	TYO	+9	The 17 seconds	JY60
Sydney	SYD	+10	The 19 seconds	JY60/JY40
Noumea	NOU	+11	The 21 seconds	
Auckland	AKL	+12	The 23 seconds	

WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

VI.MANUAL SIGNAL RECEPTION

Under normal time mode



- Press and hold the button B for 3 seconds to receive radio wave compulsively. second hands indicate "29 seconds" position

. In the second search signal status indication "29 seconds" position, the second hands good area signal ,indicate "31 seconds" position

. The signals reception always need 3 – 7 minutes. After reception of signal it will show the official local time on the watch. Everything is done automatically. However, your watch can also be manually set

. Press the B key to close the compulsory 3 seconds, and return to normal time state.

VII. AUTOMATIC SIGNAL RECEPTION

- The watch receives radio signal automatically at 3:00AM, 4:00AM, 5:00 AM everyday.
- Signal is always good in night time but not in daytime. If your watch can't get signal in daytime, just leave it nearby a window where signal is strong overnight to get radio signal.



. The recent 24H press the B key to see whether to receive success, if successfully received indicate " 14 seconds ", if not ,indicate "16 seconds"

. Press A or B key to return to the normal state, press B key 3 seconds to open the radio reception

. Automatic return function: 5 seconds no key operation automatically return to normal state

VIII. CALIBRATION

Funkarmbanduhrt dans le Guide de l'utilisateur Design Station

I. Fonction

- La réception radio du signal DCF
- Fonctionnement avec 3V CR2016
- . Fonction II touches A (terminaison) couronne sans touche de fonction B (réception radio manuel)

III. Mise en service

La fonction de réception radio est automatiquement désactivé lorsque l'horloge de plus de 3 jours avaient pas de réception radio.

Par conséquent, appuyez et maintenez le bouton B pour une période de 3 secondes, puis redémarrez sorte que la réception de la radio. Maintenant en direct à partir de l'horloge de sorte qu'il peut recevoir et traiter non perturbée du signal radio.

Que l'horloge est en contact avec le signal ou récepteur est indiqué par la position de l'aiguille des secondes. La seconde main est sur la trottseuse est à 29 minutes - la réception est activée. 31 minutes - bonnes possibilités de réception.

Le réglage de l'horloge sur le temps nécessaire DCF 3-7 minutes. Pendant ce temps, l'horloge ne doit pas être déplacé.

Après avoir reçu le temps et la mise à l'heure exacte, vous pouvez demander si la réception a été un succès ou non. Pour cela appuyez et maintenez le bouton B pour 3 secondes, puis soulève la seconde main comme suit: réception réussie est pas reçue avec succès

En cas d'échec d'une réception répéter le manuel de recevoir et de positionner l'horloge à un autre endroit.

Le temps est automatiquement reçu tous les jours ou ajusté 3,00 4,00 5,00 horloge et de l'horloge de radio.

Vous pouvez utiliser la fonction mentionnée ci-dessus, même lorsque les différences de temps plus petites, par exemple la seconde devrait se produire.

IV. Réinitialisation complète de l'horloge avec de grandes variations dans le temps

Il existe toujours la possibilité que l'horloge indique un temps différent ou complètement la batterie a été modifiée.

Voici de procéder comme suit:

1. L'horloge a un point de référence, à extrapoler à partir de laquelle chaque signal d'horloge, le temps - qui est avec 12:00 horloge - poste.

Appuyez et maintenez les deux boutons A et B simultanément pour la période de 7 secondes. L'horloge met les bouchées doubles - toutes les mains se déplacent.

Si le fonctionnement overdrive vous avez la possibilité de laisser le pointeur correspondant à la position des mains se déplacer dans un sens ou de raccourcir la période d'ajustement.

Pour ce faire, appuyez sur et relâchez le bouton A et le bouton B - les aiguilles tournent dans le sens opposé.

2. Avant la position 12:00 horloge que vous maintenez le pointeur en appuyant au