



Flex Neck Utility Lighter Instructions

English United Kingdom- en

©2013 Zippo Manufacturing Company. All Rights Reserved.

For great tips and hints on the care of your new lighter, visit zippo.com/care.

Zippo products are legally protected by patents and trademark registration, visit zippo.com/patents for details.



WARNING

KEEP AWAY FROM CHILDREN. Ignite utility lighter away from face and clothing. Do not use to light cigarettes, cigars, or pipes. Be sure flame is out after use. Never expose to heat above 50°C (122°F) or to prolonged sunlight. Never puncture or put in fire. Extreme heat is present above the visible flame. Extra care should be taken to prevent burn, injury, or fire. Follow all instructions and warnings provided by manufacturer of appliance or any other item when using this product. Do not keep lit for more than 30 seconds. Wait 2 minutes after refilling before using the utility lighter. When filled, will contain flammable gas under pressure.

Initial Fill Instructions

WARNING: This lighter does not contain butane – be sure to carefully fill lighter according to these instructions.

1. Set flame adjustment to minimum position (C).
2. Fill with Zippo Premium Butane or other premium butane gas. Do not use lighter for a minimum of 4 hours. This is to let the butane and internal parts stabilize before use. Igniting the lighter prematurely could cause an excessive and dangerous flame height.
3. When igniting lighter for the first time, be sure that the flame adjustment is set to the minimum position. Use with caution and aim safely away from person and combustible materials.
4. After the flame is stabilized, adjust to preferred flame height setting.

Instructions:

Our classic design of the Zippo Flex MPL features a patented child resistant safety lock button (A), which releases and allows the ignition switch (B) to engage.

To operate:

- 1) Depress and hold safety lock button (A).
- 2) Slide ignition switch (B) forward to ignite and hold to maintain flame.
- 3) Release the ignition switch to extinguish flame and stop fuel flow.

To adjust flame:


Turn regulator (C) to + (higher)
or to - (lower).

Do not refill near flame, heat source or sparks. Use only in well ventilated area.

To refill with butane fuel:

- 1) Use only a premium grade butane fuel to refill. Use of other than Zippo Premium Butane Fuel may result in damage to the filling valve and could cause clogging.
- 2) Always refill Flex MPL in the position shown. Place butane fuel nozzle into filling valve (D) and depress several times with firm, even pressure. Hold for several seconds. Repeat if necessary.
- 3) Wait at least two minutes after refueling before using.

Zippo Premium Butane Fuel is recommended for your Zippo Flex MPL and other refillable butane products.

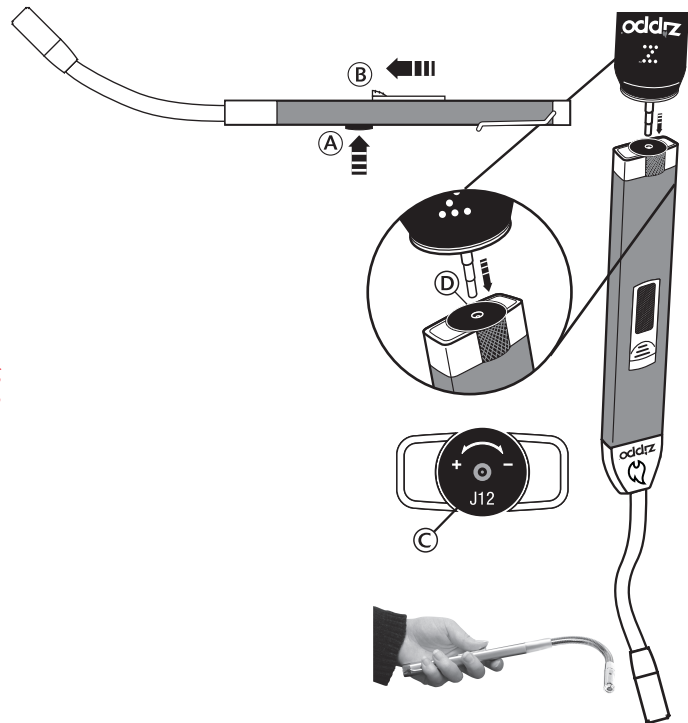

WARRANTY

Any Zippo Flex MPL returned to us for warranty repair within three years of purchase will be repaired free of charge or replaced, at our discretion. To obtain service under this warranty, please contact your Zippo distributor for instructions or return to store where purchased. Damage to the Flex MPL resulting from abuse or misuse is not covered by our warranty. The finish is not warranted.

This guarantee is additional to your statutory rights under national law.

UNDER NO CIRCUMSTANCES CAN YOU MAIL A FLEX MPL TO ZIPPO. PLEASE FOLLOW THE ADVICE OF OUR DISTRIBUTOR IN YOUR COUNTRY

For product or repair information contact ZippoConsumer Relations Dept., or visit www.zippo.com :

Zippo U.K. Ltd.

Barley Mow Centre
10 Barley Mow Passage
LONDON
W4 4PH
Phone: +44 208 9640666
Fax: +44 208 9680400
www.zippo.co.uk

For product repair send lighter to:

ZIPPO European Repair Clinic

Groendahlscher Weg 87
D46446 Emmerich,
DEUTSCHLAND
Phone: +(49) (0) 2822 960275
Fax: +(49) (0) 2822 960280
www.zippo.de