

RADIO CONTROL SOLAR POWERED WALL CLOCK

Instruction Manual

A. Technical specifications:

1. Rechargeable Battery: 1XAA 400MAH (battery included)

Battery life: 6 years

2. Energy Consumption:

Energy source: Sun or strong light

RECEIVING CURRENT <105UA,

CURRENT CONSUMPTION NORMAL <175UA,

B. HOW TO USE THE CLOCK?

1. How to use the clock?

- 1.1. Put battery into compartment, then the clock will receive signal, and the hour and minute hands move to 12:00, 8: 00 and 4: 00 automatically.
- 1.2. If after ten minutes no signal is received, it means that the radio control signal is not strong enough or unavailable, and the clock will need to be set manually.

2. How to set time manually:

- 2-1. Press "M.set" longer than 3 seconds to start the time setting function. Time starts, and keep it pressed until the hour and minute hands move to the desired time.
- 2-2 To ensure that the clock is set to the exact time desired, please keep the "keypress" status for some time until the hour and minute hands move close to your desired time but not exact time. Then stop and begin to press "M. Set" button immediately. Stop, and then begin to press again and then stop....; Repeat until the hour and minute hands move to the exact time desired. Combined with process 2-1 will make the time setting quicker.
- 2-3 Don't press any button, exit manual setting after 4 seconds automatically

3. Clock is working when receiving signal

- 3-1. When a signal can be received it is updated 8 times everyday. The receiving times are the following:

- AM2:00; AM3:00; AM4:00; AM5:00;
- PM2:00, PM3:00, PM4:00, PM5:00;

- 3-2. REC button: press it long for 3 second to set the function of receiving signal by manual.

Remarks:

1. Press "RESET" if clock is not working, or check battery
2. Please take out battery if not using for a long time.
3. Do not use normal battery
4. In order to charge battery, the solar panel must be have light
5. Please check and charge battery if clock is not working well

WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.



This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.