

Instruction manual

BEFORE USING: In order to start the watch, please remove the plastic stopper first, and then push the crown against the watch.

FEATURES

- Battery : 1 X SR626SW, 1.55V
- 1 ATM

SETTING THE TIME AND THE DATE

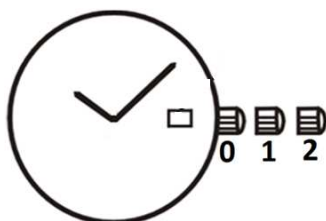


Fig. 1

Position 0 : Normal running position

Position 1: Pull the crown gently to position 1 and turn it in one direction or the other to set the date.

Position 2: Pull the crown gently to position 2 and then turn it in one direction or the other to set the time. Push the crown back into the position 0 to confirm and finish.



In order to change the date the next day, the date must be set between 1 am and 8 pm.

BRACELET ADJUSTMENT



Figure 1




Figure 2



Figure 3



Figure 4

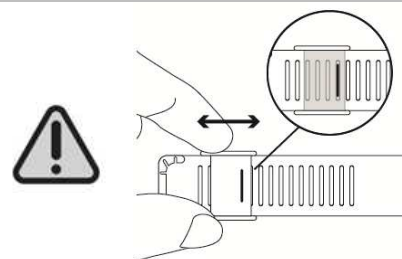

Note: There are 14 notches on the back of the bracelet. Be sure to put the metal tab, located inside the clasp, on the notch chosen to adjust the bracelet on your wrist.

(Note: It is recommended to use a small flathead screwdriver to open or close the metal tab)

WARNING

- To maintain the appearance of your watch, avoid contact with the following: Perfumes, hairspray, cosmetics, detergents, adhesives and paints as they cause discoloration, deterioration and damage.
- To prevent the risk of perspiration, dust and moisture, wipe your watch regularly with a soft, dry cloth.
- To ensure lasting durability please take note of the following points: Never attempt to open the case of your watch. Batteries should be replaced by a qualified technician.



WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled. This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

Imported by PRODIS SAS, 1 rue de Rome, 93110 Rosny-sous-Bois, France/ Made in PRC
Marketed by EUROTOPS VERSAND GMBH D-40764 LANGENFELD, Germany

