

# Stormlight With Flame Effect - Art. No. 44 242

## User Manual



1. stormlight top ring    2. battery case    3. light switch

### Lighting Mode

1. Dancing flame - OFF
2. Constant lighting - OFF
3. Slow fade lighting - OFF

### Operation Directions

1. The product is powered by 3pcs 1.5V D size alkaline batteries (not provided). Prepare the batteries before using.
2. Take out the unit from the package box and remove all protections carefully.
3. Open the battery case at the bottom of the product by slightly pushing the buckle according to the guidepost on the battery cover.
4. Put the batteries inside the battery case with correct polarity.
5. Cover the battery cover back slightly.
6. There are 3 lighting modes of this stormlight . Turn on by rotating the switch clockwise to be Dancing flame mode, and turn off by rotating the switch anti-clockwise; turn on again to be Constant lighting mode and turn off again; turn on to be Slow fade lighting mode and turn off again.
7. Each lighting mode has dimmer function, you can adjust the light brightness by rotating the switch.

### Warning

1. Children under 6 years old should not use this product without adult supervision.
2. Do not place the unit on the surface where it can easily fall off or drop.
3. Keep the unit away from fire, water and avert the unit being immersed in water in order to avoid explosion, leakage.
4. Take out the battery if not in use for long time.
5. No one except for professional technicians should attempt to disassemble the product in order to avoid damaging the product.

## ATTENTION!!!

The returns will be impossible if products were damaged because of incorrect use.

## DISPOSAL:

The packaging material is reusable. Dispose of the packaging in an environmentally friendly way by putting it in the appropriate recyclable waste collection containers.



Dispose of the product and the batteries in view of the environment if you want to separate. The device and the batteries must not be thrown in with domestic waste. Take them to a recycling center for used electrical and electronic devices. For more information you can consult your local government. Remove batteries first.

Eurotops Versand GmbH  
Elisabeth-Selbert-Straße 3  
40764 Langenfeld, Germany



If technical support is needed, please call ...

in Germany	0180 . 530 63 63* or <a href="mailto:info@eurotops.de">info@eurotops.de</a>
in Austria	01 . 230 60 43 12 or <a href="mailto:info@eurotops.at">info@eurotops.at</a>
in Switzerland	044 . 28 36 125 or <a href="mailto:info@eurotops.ch">info@eurotops.ch</a>
in the Netherlands	026 . 37 36 333 or <a href="mailto:info@eurotops.nl">info@eurotops.nl</a>
in France	0892 . 700 470** or <a href="mailto:info@eurotops.fr">info@eurotops.fr</a>

\* 14 Cents/minute via German landline, max. 42 cents/minute via mobile phone network

\*\*34 Cents/minute via French landline

A possible return of products should be addressed to the return address stated on your invoice.

© 17.06.2019