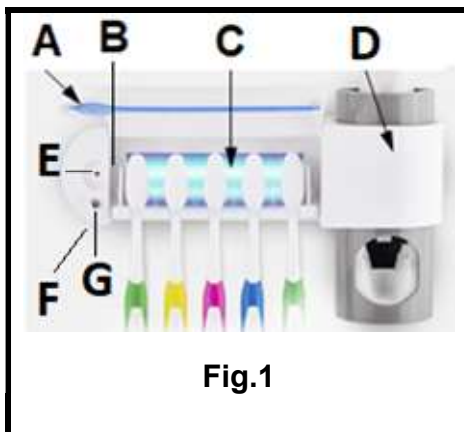


**PLEASE READ THE MANUAL BEFORE YOUR FIRST USE. KEEP THIS MANUAL SAFE FOR FUTURE REFERENCE!**

## WARNINGS

1. Do not use appliance for other than intended use. It is intended for domestic use only.
2. Before connecting the appliance to the mains, make sure the voltage of your appliance indicated on the rating plate corresponds to the local voltage.
3. In order to disconnect the device power supply, pull on the plug, **NOT** the cable.
4. Make sure the power connection inlet is dry before using.
5. The appliance should be unplugged:
  - if there is a problem when in operation ;
  - before cleaning and proceeding with the maintenance,
  - before assembling or disassembling it;
  - after finished using it.
6. Do not use the appliance if it does not operate correctly during operation, or if the power cord or plug is damaged.
7. Never attempt to dismantle or repair the appliance yourself. Take your appliance to an approved service center.
8. **All repairs should be done by a qualified technician.**
9. Keep it away from heat sources, direct sunlight, humidity, water, or other liquids.
10. Do not operate it under high temperature.
11. Do not immerse in water or other liquids.
12. Do not subject it to strong impacts and do not throw it.
13. Do not drop, short-circuit, modify, disassemble or puncture it.
14. Handle the product with care. A blow, a shock, or a fall, even from a low height, can damage it.

## PRODUCT DESCRIPTION



**Fig.1**

- A. Cover of sterilizing lamp
- B. Toothbrush Holder
- C. Sterilizing lamp
- D. Toothpaste Dispenser
- E. LED indicator
- F. Adapter inlet
- G. ON/OFF button for sterilizing lamp

Accessories included:

1 x adhesive pad + 1 x Adapter + 1x toothbrush rack

## TECHNICAL SPECIFICATIONS

- Toothbrush disinfection rack: DC 5V, 180mA, 2W
- **UV lamp** : 1 UVC tube – Wavelength : 253.7nm - UV intensity = 1000 UW/cm<sup>2</sup>
- Adaptor : Input : AC110-240V – 50/60Hz/ Output : DC5V 500mA

## MOUNTING

### Pasting the adhesive pad onto the wall


1. Remove the plastic film.
2. Paste the adhesive pad, horizontally, onto a clean and dry wall, near the electrical outlet.

**Wait 2 hours before installing the toothbrush disinfection rack !**



### Mounting and installation of the toothbrush disinfection rack

1. Install the toothbrush rack by inserting its 2 hooks into the corresponding holes of the toothbrush disinfection rack, just under the UV tube lamp.
2. After opening the toothpaste tube, insert its neck into the toothpaste dispenser and screw the tube clockwise.
3. Insert the 2 hooks on the adhesive pad into the holes, at the back of the toothbrush disinfection rack (See the illustration on the opposite).

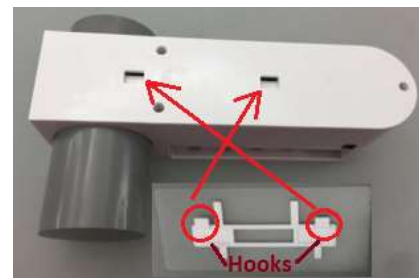

## OPERATION

### A. TOOTHPASTE DISPENSER

1. After installing the toothpaste tube (see Mounting section), squeeze its bottom to allow the toothpaste to go down along the dispenser's pump.
2. Position your toothbrush, bristles facing up, at the bottom of dispenser. Press it against the inside plates of the dispenser to get an appropriate amount of toothpaste.

### B. TOOTHBRUSH HOLDER

Install up to 5 toothbrushes onto the toothbrush rack.



To avoid water spilling into the UV lamp, after using the toothbrush dry it before hanging it onto the toothbrush rack.

### C. TOOTHBRUSH DISINFECTION



**DO NOT** stare directly at the UV light beam.  
**DO NOT** direct at people or animals or into people's or animals' eyes.  
**DO NOT** touch the UV tube.  
**DO NOT** use UV light as light source.

1. Insert the connector of adapter's cable into the adapter inlet of the product. Then, plug adapter's plug into electrical outlet.
2. Lift the cover of toothbrush disinfection rack.
3. Press ON/OFF button to turn on the UV sterilizing lamp. The UV lamp is on. It automatically turns off after 4-5 minutes.

**Notes:**

- Close the cover after turning on.
- On first use or when not used for long periods of time, the UV lamp may light up 6- 10 seconds later (When temperature is below 10°C, the lamp may not light. )

4. Press ON / OFF button to turn off the lamp.

## CLEANING AND MAINTENANCE

- DO NOT IMMERSE THE TOOTHBRUSH DISINFECTION RACK IN WATER OR ANY OTHER LIQUID.
- DO NOT CLEAN THE UV LAMP.
- DO NOT USE ABRASIVES OR CLEANERS.

- Unplug before cleaning.
- Clean with a dry and lint-free cloth. If it is dirty, use a slightly wet cloth and dry thoroughly.
- Remove the toothbrush rack to clean it thoroughly. Dry it and remount.



**WARNING:** You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled.

This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

If the power cable is damaged, it must be replaced by the manufacturer, his after sales service, or a person qualified in this area in order to avoid any accidents arising.



Imported by EML – trading name Prodis, 1 rue de Rome 93110 Rosny-sous-Bois-France/ Made in PRC  
Marketed by EUROTOPS VERSAND GMBH D-40764 LANGENFELD, Germany