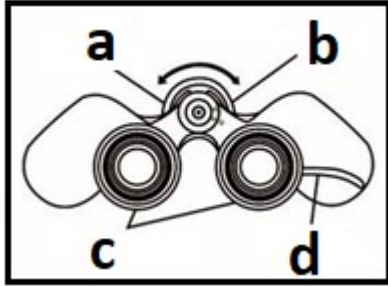


**PRPRODUCT DESCRIPTION**

- a. Center focus
- b. IPD scale
- c. Rubber fold-down eyecups
- d. Zoom lever

**HOW TO USE YOUR BINOCULAR***Adjustment of inter-pupillary distance (IPD)*

Set the interpupillary distance by grasping the body and bending it until you can see one circle of view. Note: Your binocular has an IPD scale. The setting for your eyes will be indicated on the IPD scale. (Note the setting for later use.)

*FOCUSING (Binocular With Adjustable FOCUS)*

1. Close your right eye and sight an object with your left eye. Focus the binocular by rotating the center focus wheel until the image is sharp and clear.
2. Open your right eye and close your left eye. Rotate the right eyepiece until the object sighted is sharp and clear. (Note the setting of the diopter scale for later use.)
3. Both sides (eyes) are now in focus and you will need to use only the center focus wheel to focus on other objects.

*RUBBER FOLD-DOWN EYECUPS*

Fold down for use with eyeglasses and fold up for use without eyeglasses. They provide comfort and promote viewing ease.

**TECHNICAL DATA**

- Magnification: 8x
- Objective Diameter: 21mm
- Field of View: 131m/1000m

**CLEANING AND MAINTENAN**

- A. To clean the lenses, use the lens cloth, that comes with the binoculars, or a soft lint-free cloth.
- B. To remove any remaining dirt or smudges, add one or two drops of isopropyl alcohol to the cloth.
- C. Store your binocular in a moisture-free area.

**VERY IMPORTANT**

- Never attempt to dismantle the interior of your binoculars or to take it apart.
- CAUTION! Viewing the sun can cause permanent eye damage. Do not view the sun with the binocular product or even with the naked eye.

Imported by EML – Trading name: Prodis 1 rue de Rome 93110 Rosny-sous-Bois-France/ Made in PRC

Marketed by EUROTUPS VERSAND GMBH D-40764 LANGENFELD